 
 
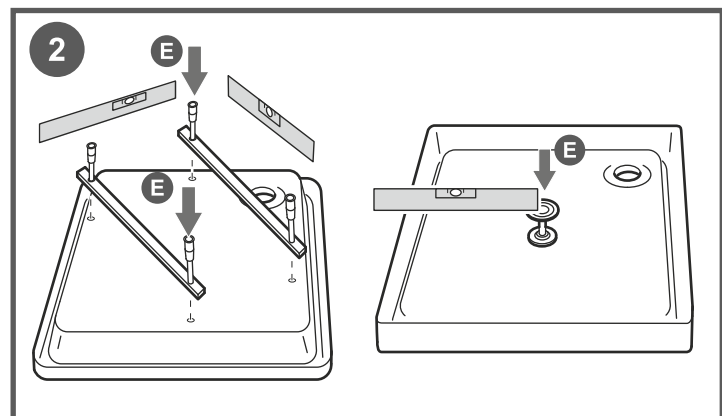 
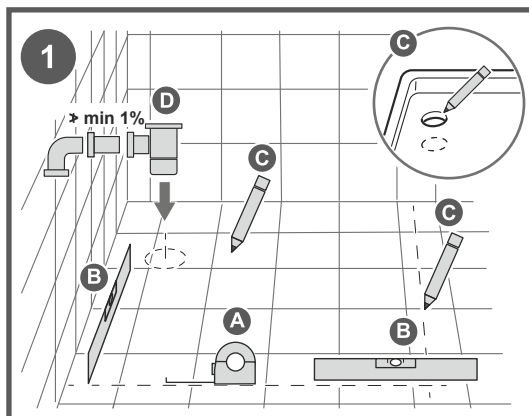 
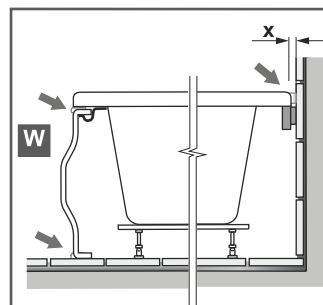 
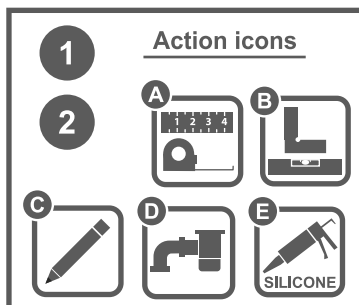 
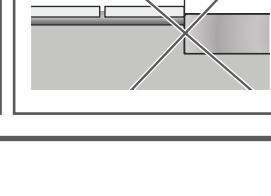 
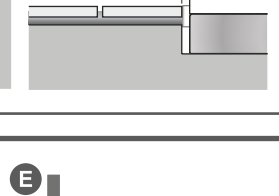 
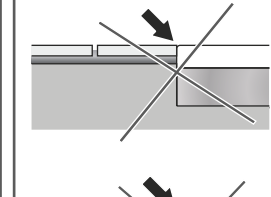 
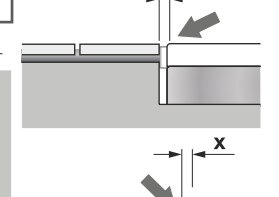 
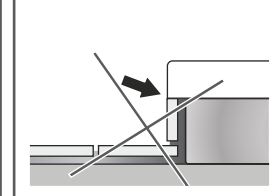 
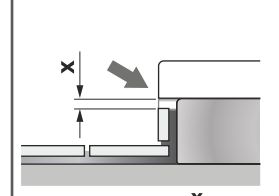 
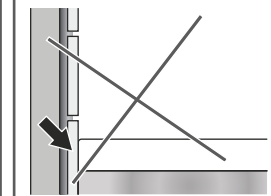 
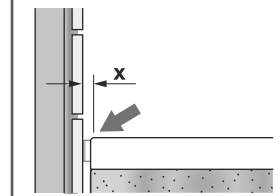 
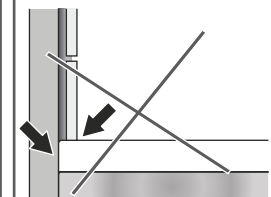 
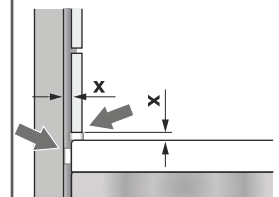 
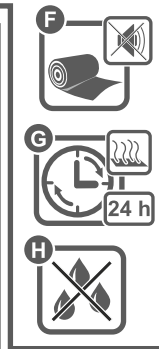 
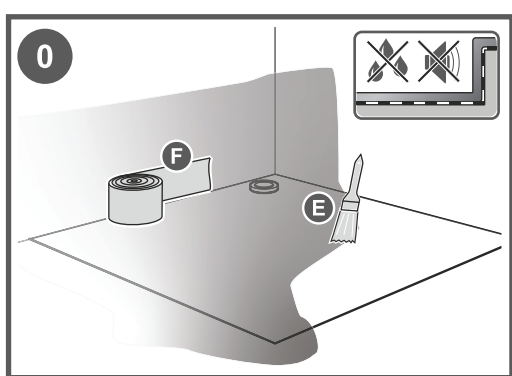 
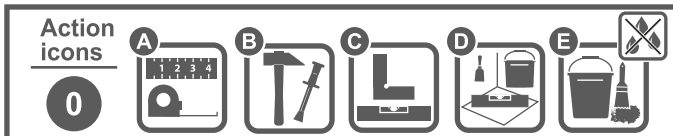 
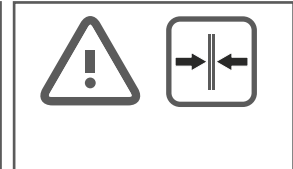 
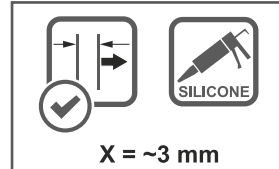 
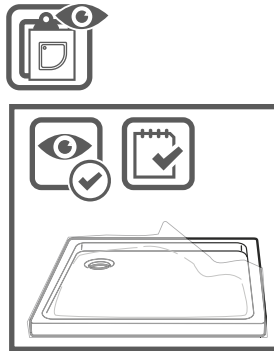 


PL Instrukcja montażu
EN Installation instructions
DE Montageanleitung

FR Instructions de montage
CZ Montážní návod
SK Návod na montáž

HU Szerelési utasítások
RO Instrucțiuni de instalare
RU Инструкция по сборке

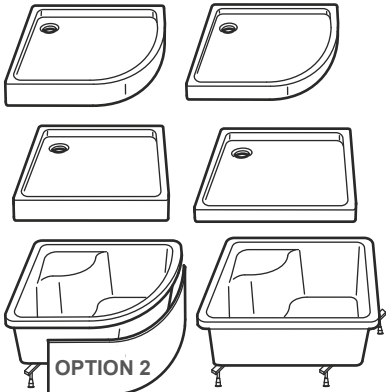

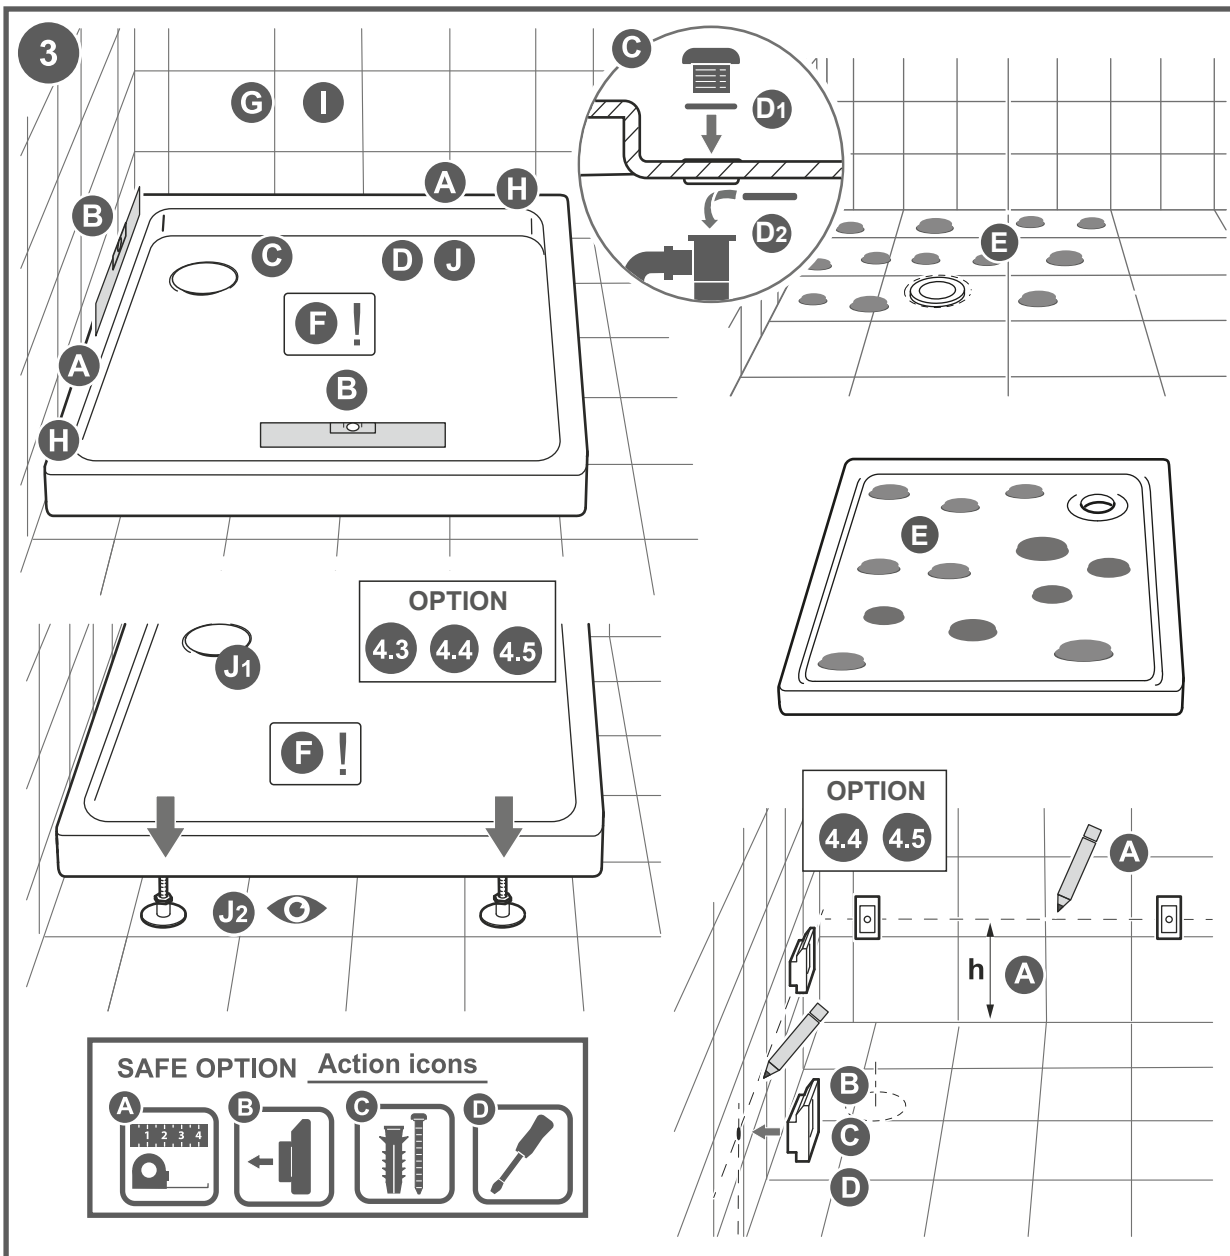

Action icons

3 4

A 1 2 3 4

B

C

D1

D2

E

E1

F 50kg

G 12 h

H SILICONE

I 12 h

J1

J2

