

Rules of safe usage of fireplaces, stoves or garden grills

NOTE! Before assembling and usage, check whether the device is free from defects.

1. The device should not be used until it is completely assembled and all individual parts are correctly installed.
2. Before using, place the device on an even surface, to prevent its toppling.
3. The device should always be used outside, never indoors.
4. If the device has grilling functionalities:
 - check, whether the optional grate/plancha is correctly inserted,
 - when using for the first time, the grate and plancha should be heated for ~20 minutes, without any food,
 - the grate/plancha should be thoroughly cleaned after each use – remains of fat may be burned during subsequent usage,
5. Do not use gasoline, spirits, oil or other flammable liquids for kindling or during grilling,
6. Use only kindling that is up to date with European standards for kindling materials (EN 1860-3),
7. The device may be used solely by adults, not under influence of alcohol or other substances.
8. The device should not be left unattended. The device should be protected from children and pets.
9. The device should not be used continuously for more than 5 hours.
10. The device should be stored in a place inaccessible for children.
11. If the device is not used, it should be stored under a dust cover, to prolong its longevity.
12. Do not place your hands over the device! Risk of burns!
13. Take special care when dousing the fire in the device. Surfaces may remain hot for some time after usage.
14. Do not use water to douse the fire, it may damage the device. The fire should be left to go out by itself; alternatively it may be doused with sand.
15. Keep a fire extinguisher close to the device.
16. The device, when heated, should not be splashed with water and should not be cleaned with a pressure washer.
17. The device should be stored far away from flammable materials. The device should be kept at a distance from other objects – 2.5 metres minimum.
18. Use only dry kindling.
19. Only wood of height no greater than 20 cm should be burned in the device.
20. The wood should be placed in the stove in such a way that it does not extend over its edges.
21. Large fires are dangerous and may shorten the lifespan of the device!
22. The device should be regularly cleaned, to extend its lifespan as much as possible.
23. Keep the device clean of dust and remains of wood.
24. Cleaning work should be conducted on cold surfaces.

Note!

1. When burning with fire, the device heats rapidly and is a burning hazard.
2. Do not touch the device when heated, or use protective gloves.
3. When using the stove, always adhere to fire safety regulations.

Warranty

The device is covered by a 2 year warranty. The warranty covers manufacturing and material defects, for replacement of faulty parts. Incorrect usage and individual modifications of the device void the warranty. Warranty details can be found in the Warranty Card attached to the device.

For any questions or doubts as to correct usage of the fireplace, stove, or garden grill, please contact the manufacturer: FPH BLENDER, 14-100 Ostróda, ul. Olsztyńska 5F, Poland. Telephone number: +48 89 646 49 62

Please enjoy your free time spent with our products.