
ONDA Radiator Installation Instructions

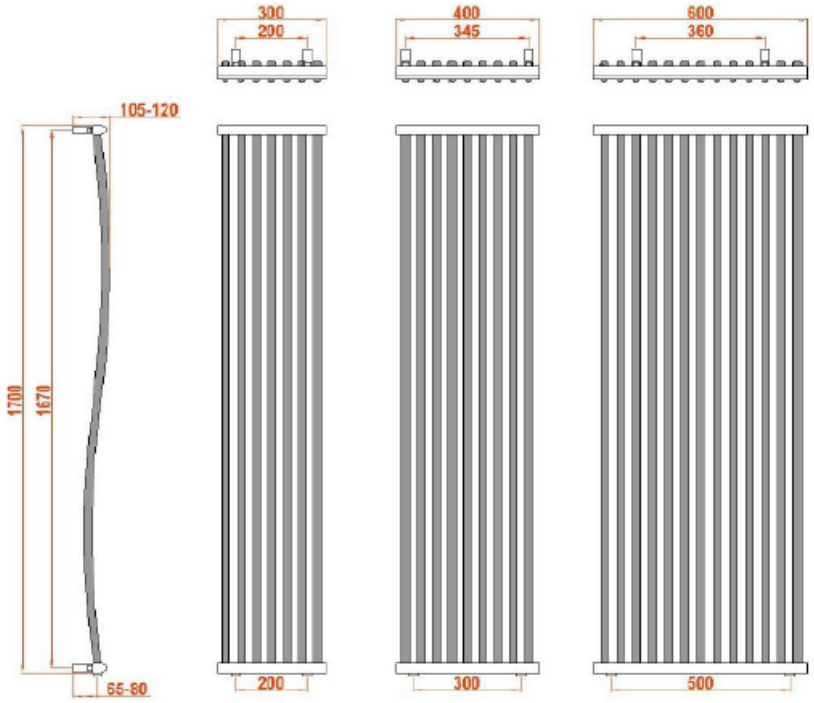

Package contents



4 x bracket (2)



4 x threaded mounting pin (6)



4 x wall plug (1)




4 x fixing screw (5)



4 x washer (4)



4 x grub screw (3)

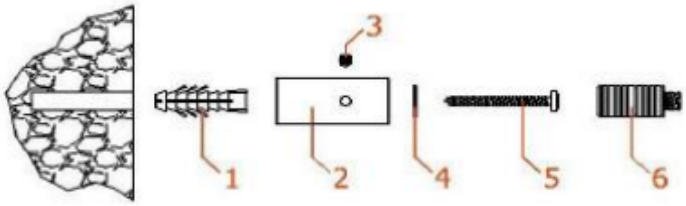

Installation

1. Mark all radiator mounting points on the wall using the dimensions given in the technical data sheet.
2. The radiator must be installed at least 50 mm from any overhanging surface and at least 100 mm above the floor.
3. Use the first point as a reference and align the remaining points using a spirit level.
4. Drill the holes in the wall and insert the wall plugs (1), or use other suitable fixings.
5. Secure the brackets (2) to the wall plugs (1) using the washers (4) and fixing screws (5). Align the brackets (2) vertically.
6. Insert the threaded mounting pins (6) into the brackets and tighten the grub screws (3).

General recommendations

- This product must be installed by a qualified installer only.
- Before installing the radiator, flush the heating system to remove any dirt, installation debris, traces of flux, oil, etc.
- Air in the heating system may reduce performance. Release the air using the air vent valve.
- Draining the radiator may cause corrosion.
- Clean the radiator surface only with a soft cloth to avoid scratching it.
- DO NOT USE abrasive products, aggressive chemicals, cleaning solvents or bleach.
- The maximum operating temperature is 95°C and the maximum operating pressure is 5 bar.

UBC s.r.o.
Mělnická 87, 250 65 Bořanovice, Pakoměřice, Czech Republic
Tel.: +420 283 090 760 | Fax: +420 283 090 761
E-mail: info@sapho.cz | Website: www.sapho.cz