

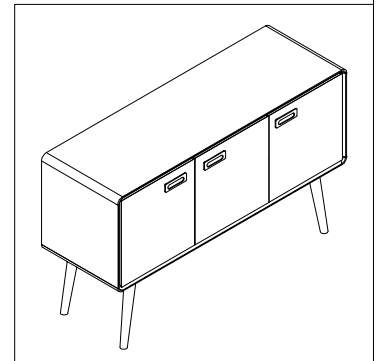
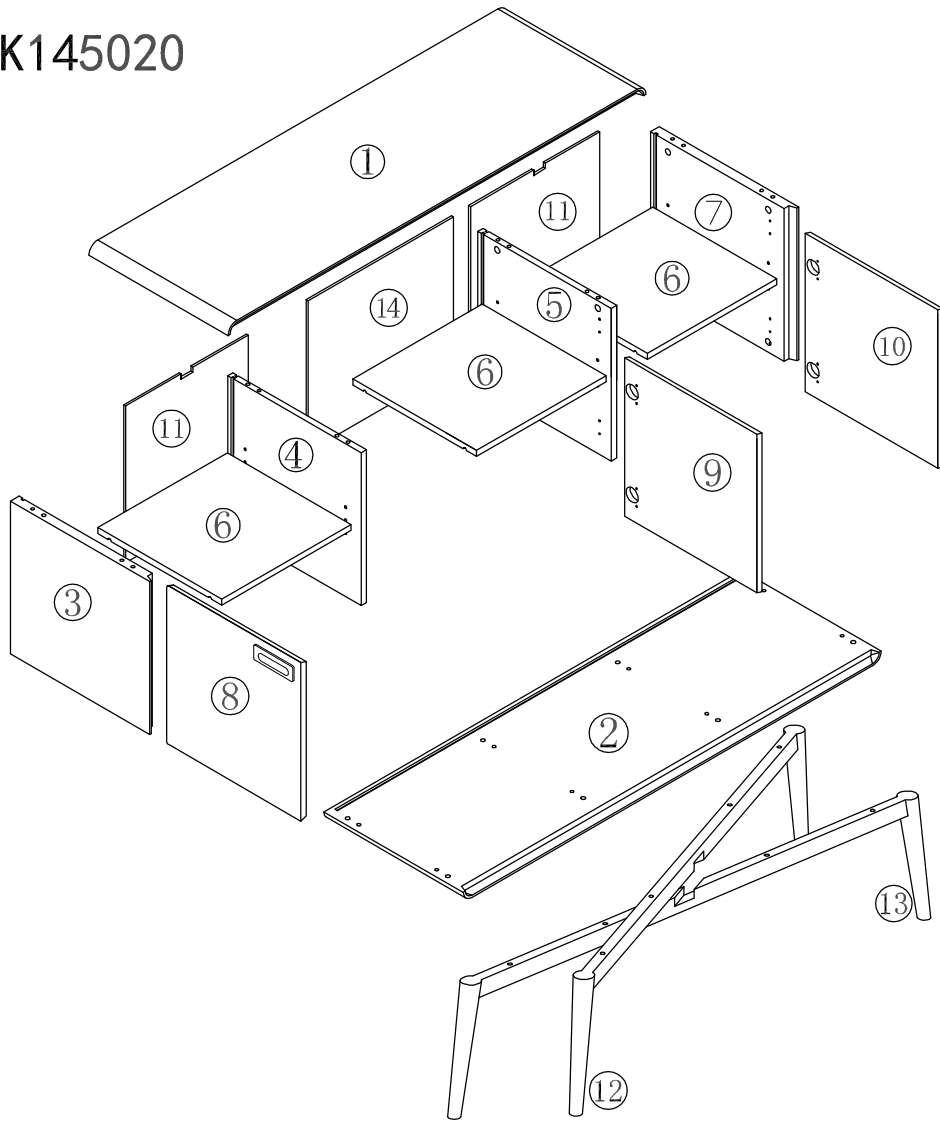



AK145020

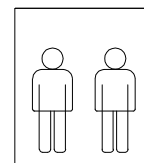

DO NOT TIGHTEN ALL THE SCREWS BEFORE YOU FINISH ASSEMBLY





OUTILLAGE. TOOLS. WERKZEUG. HERRAMIENTA. ATTREZZATURA



A x12 	B x12 	C x12 	D x16 ø8x30 	E x4 ø6x48 	F x4
G x38 ø4x15 	H x8 ø6x40 	I x2 	J x12 ø6*18mm 	K x1 	L x2
N x8 	O x8 Ø3*18 mm 	P x2 			

QUINCAILLERIE. HARDWARE. BESCHLAGE. FERRETERIA. CHINCAGLIERIA


1

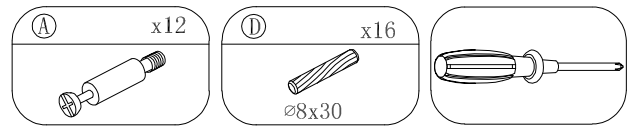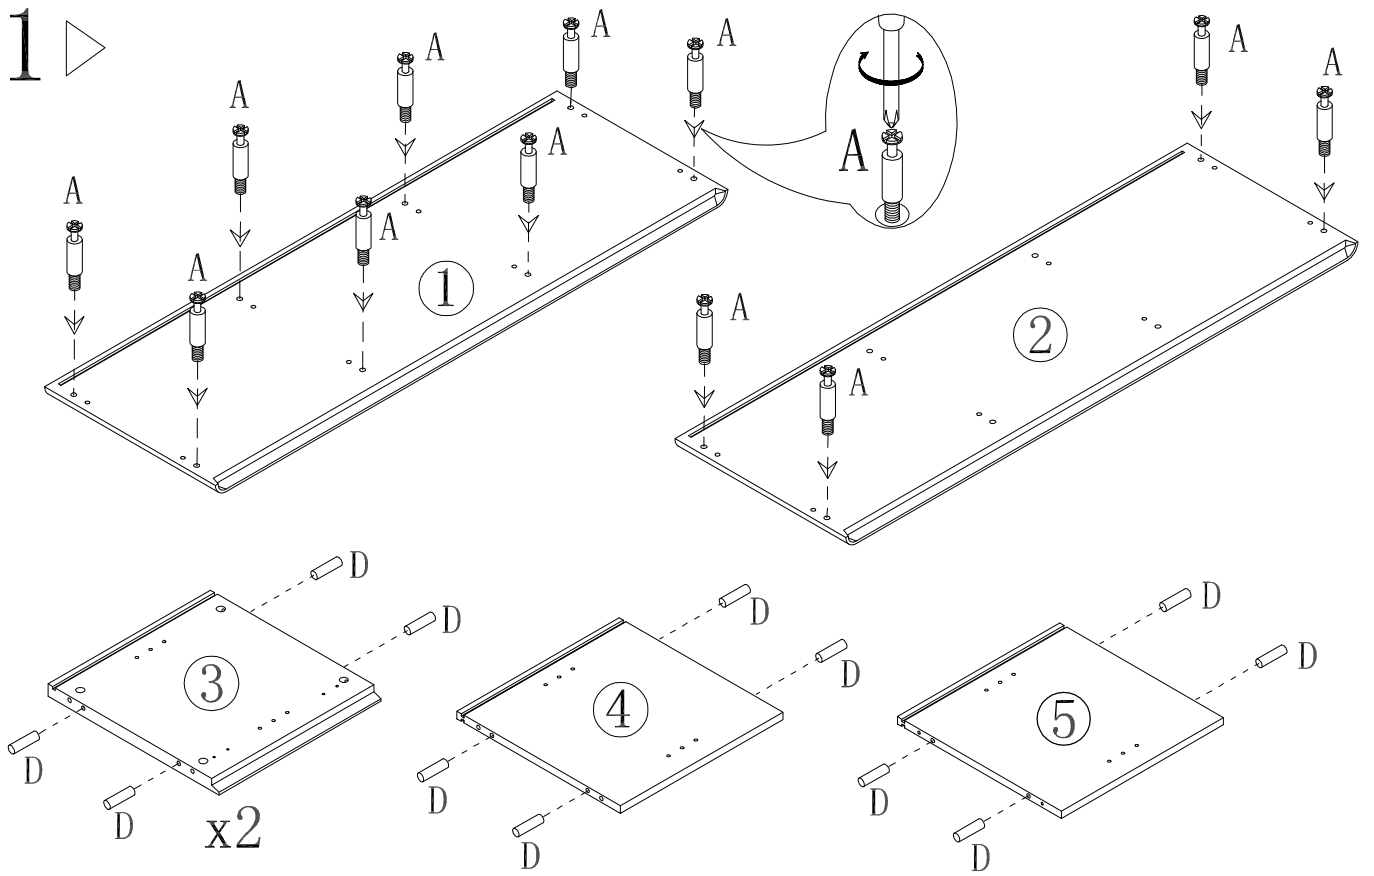



2

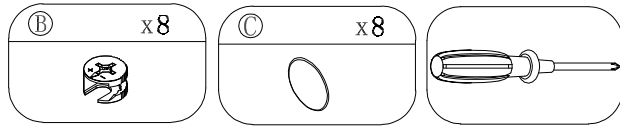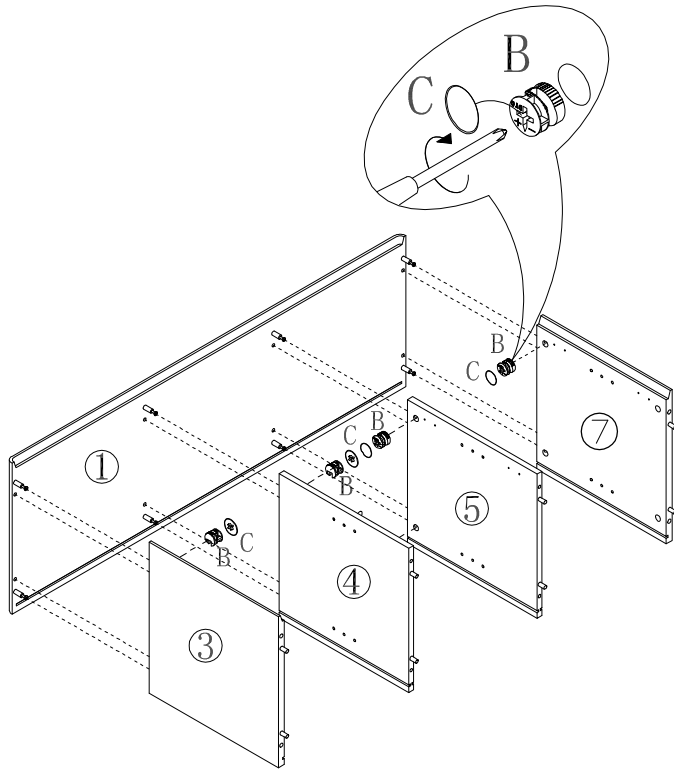



3

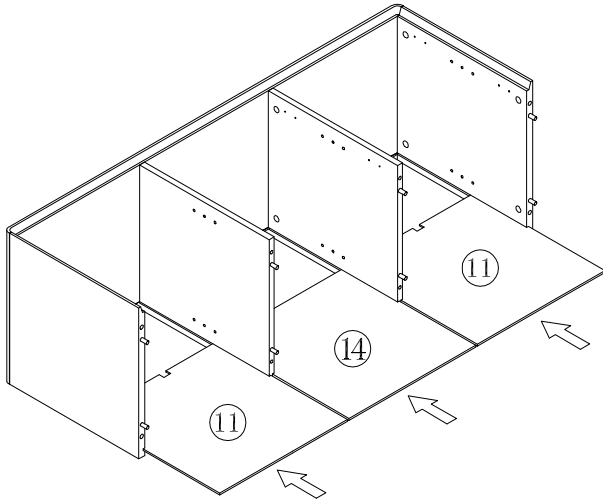





4

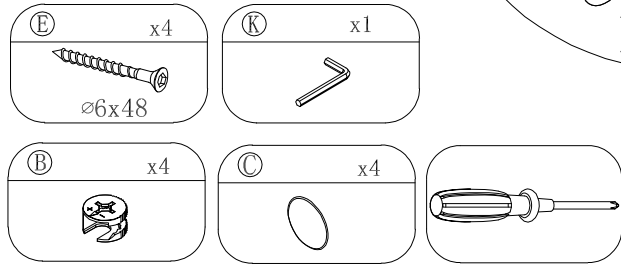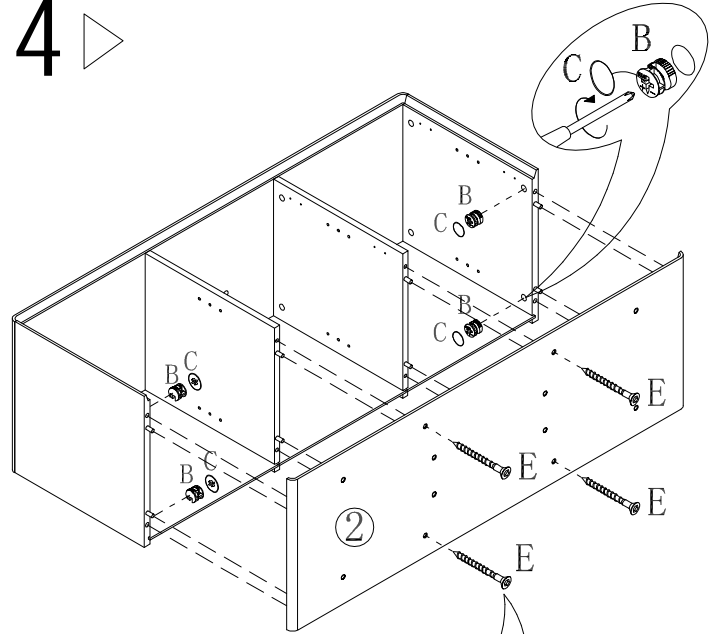






5

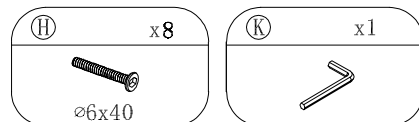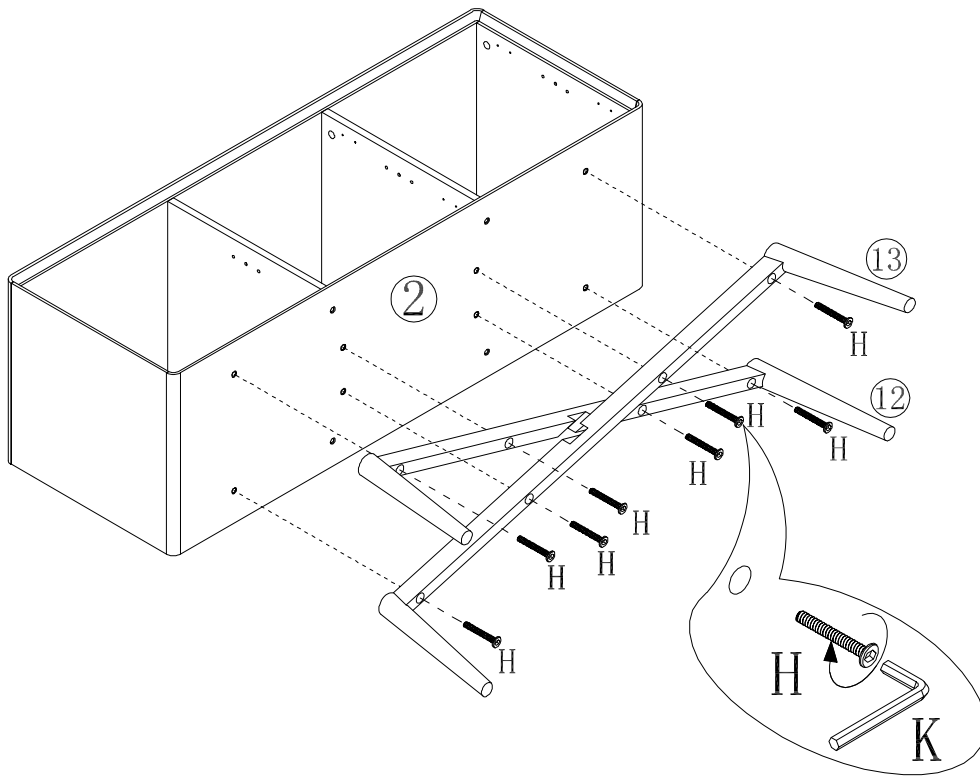



6 ▷

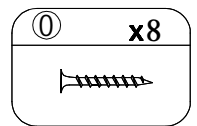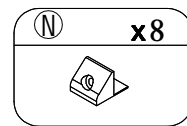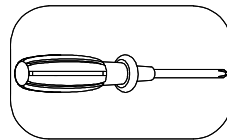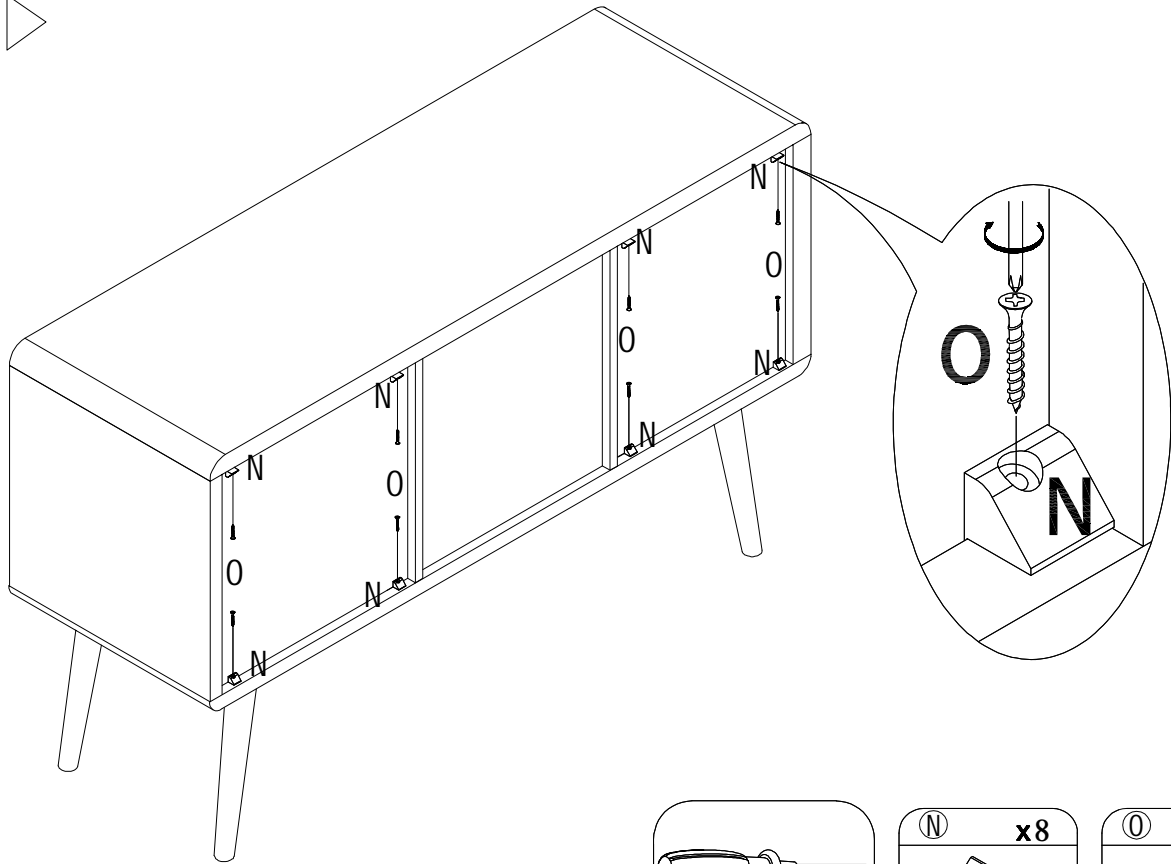



7 ▷

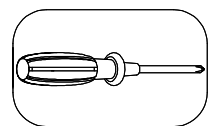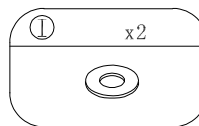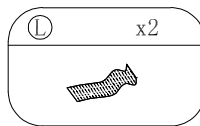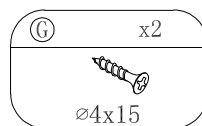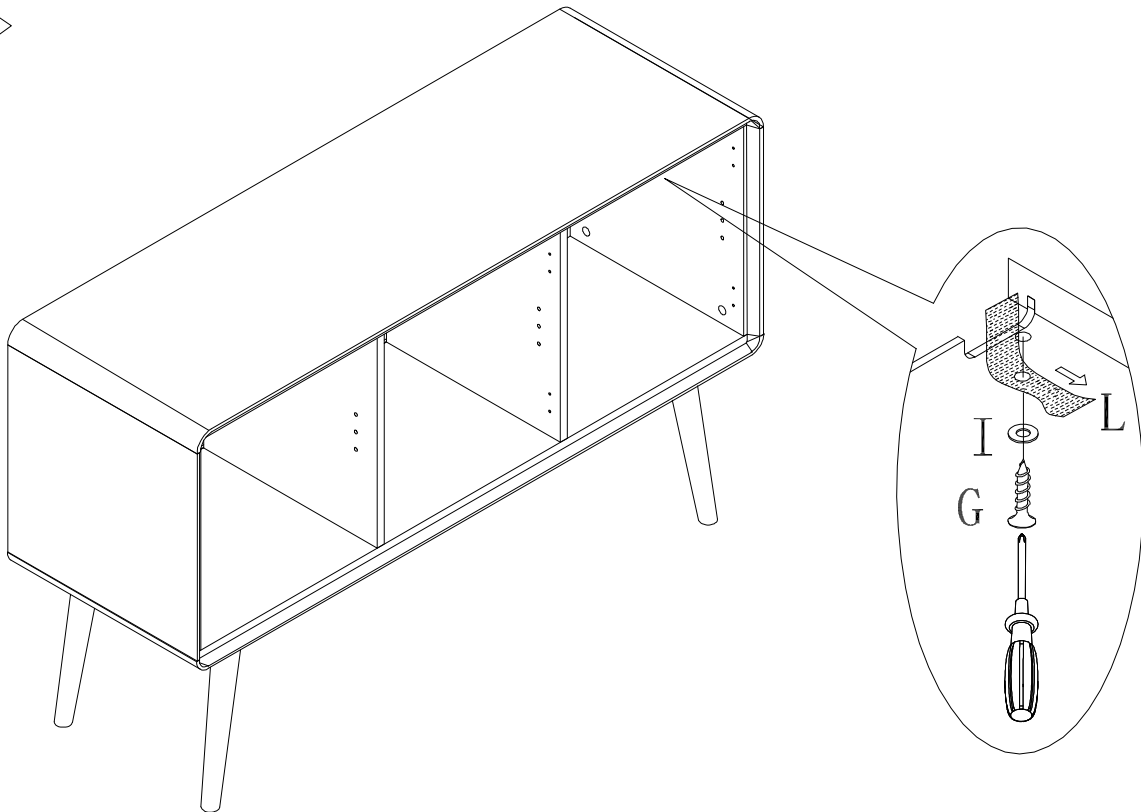

8 ▷

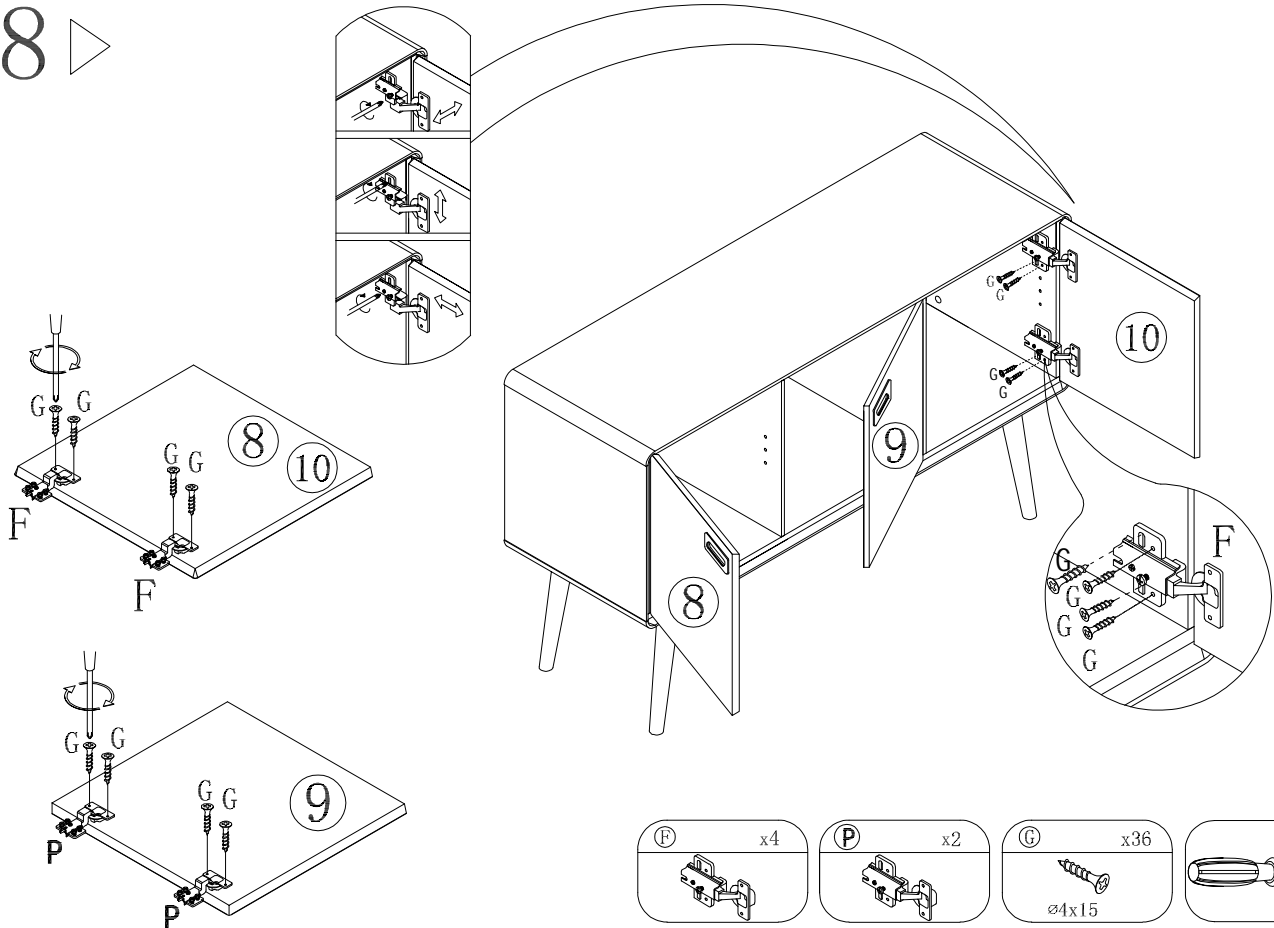

9 ▷

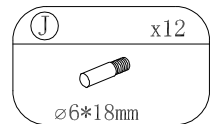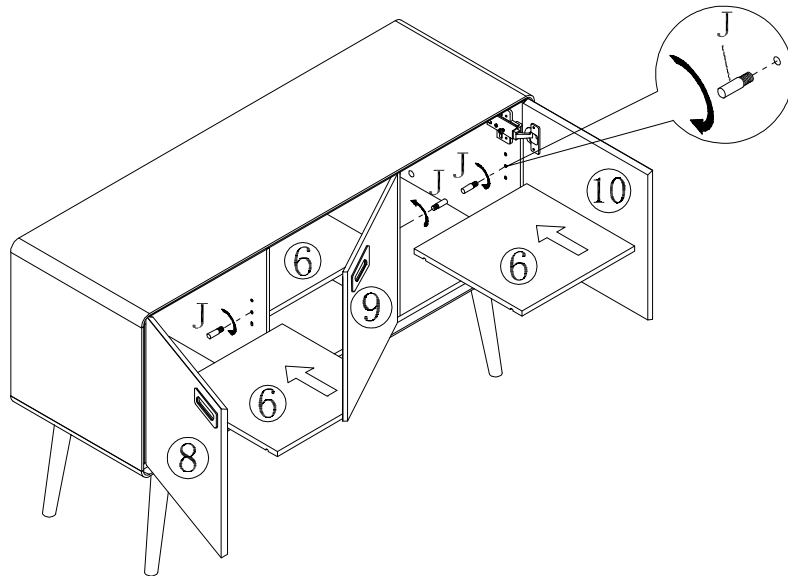

10 ▷

