


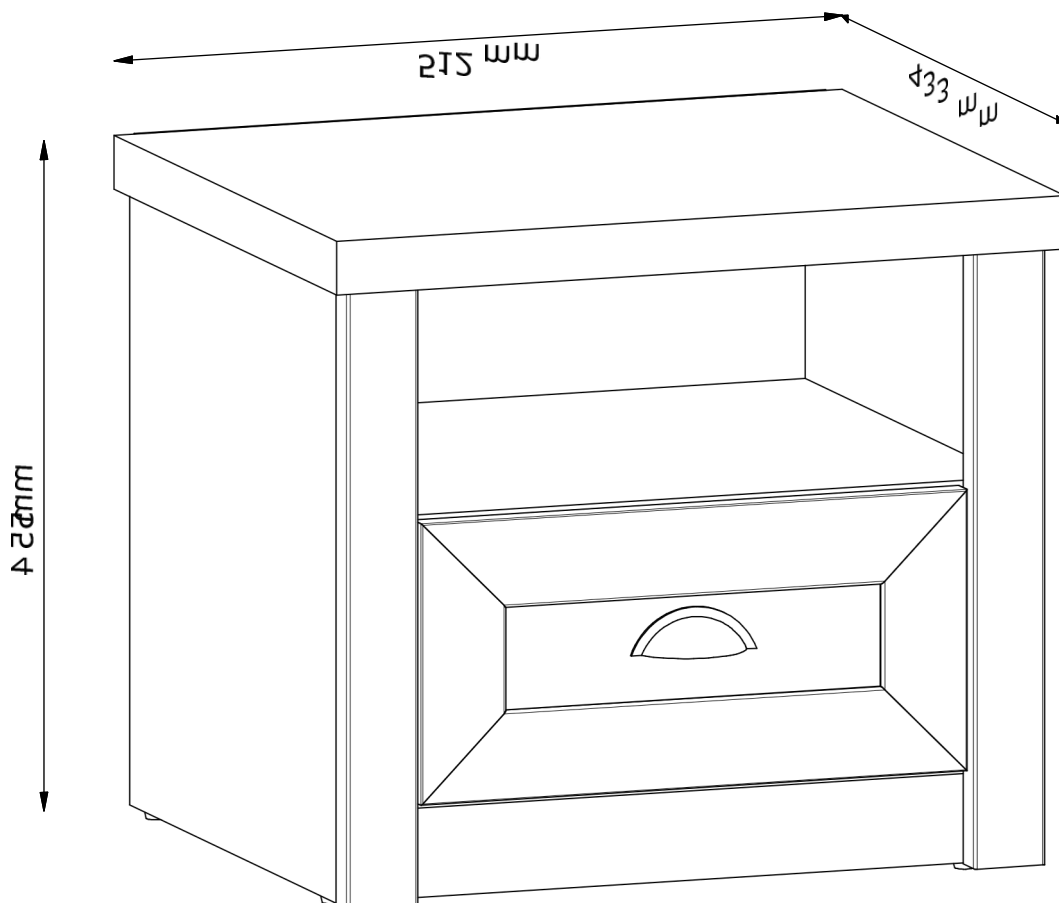
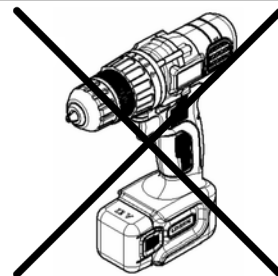


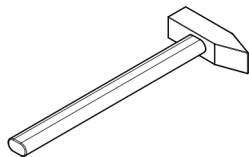

PL: INSTRUKCJA MONTAŻU
EN: ASSEMBLY MANUAL
CZ: PŘÍRUČKA PRO MONTÁŽ
SK: PRÍRUČKA PRE MONTÁŽ
DE: MONTAGEANLEITUNG
SR: UPUTSTVO ZA INSTALACIJU
NL: MONTAGE-INSTRUCTIES

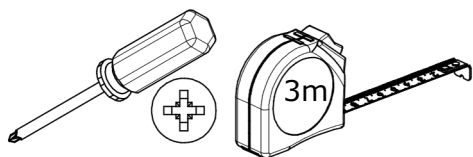


A1 x 16

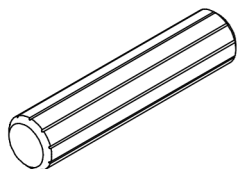


Ø8x35mm

B1 x 18

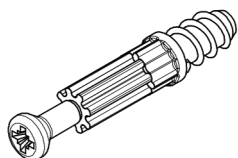


Ø5x38mm

C1x16

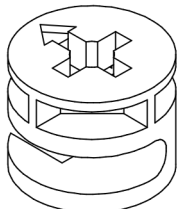


Ø15x12mm

C2x2

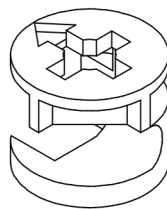


Ø12x10mm

F2x4

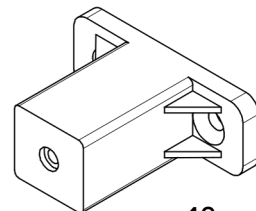


40mm

G1 x 16

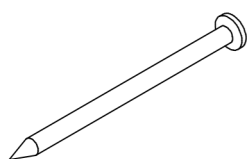


26mm

J1x8

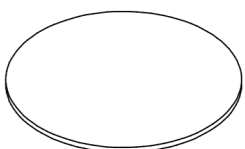


Ø21mm

P2x2

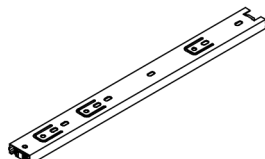


350mm

U3x1

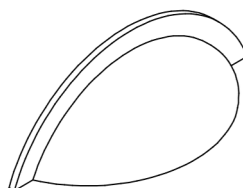


92x33mm

W1x6

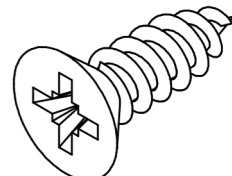


Ø3,5x13mm

W2x8

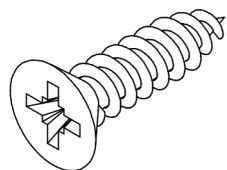


Ø3,5x16mm

W5x6

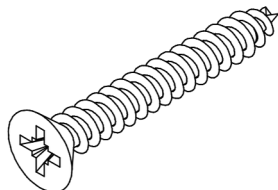

Ø4x30mm

X2x2

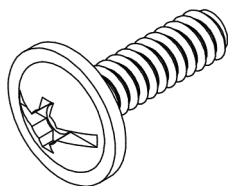


M4x16mm

Y1x2










Ø8x1,5mm

Y5x6

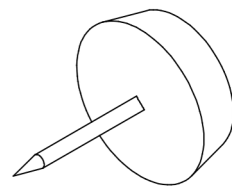





Ø15x20mm

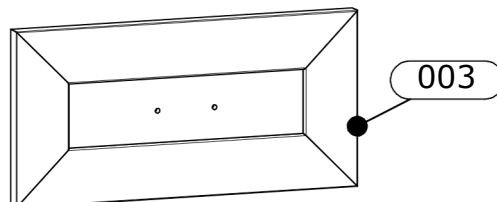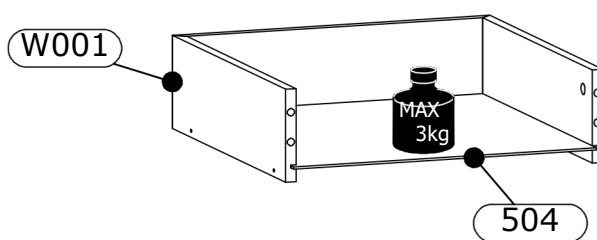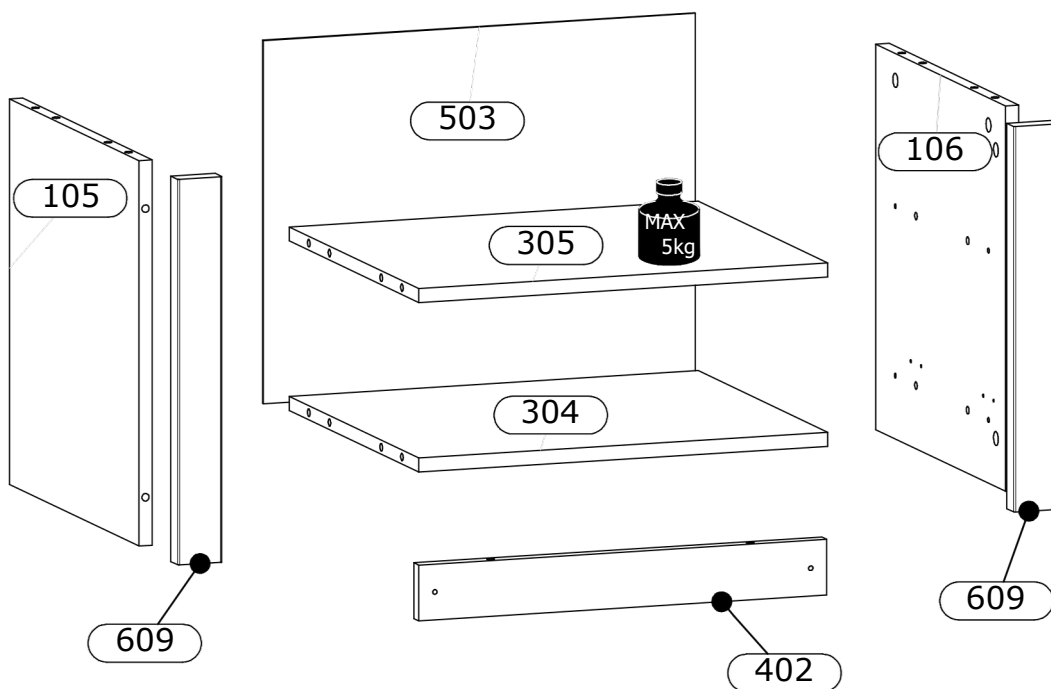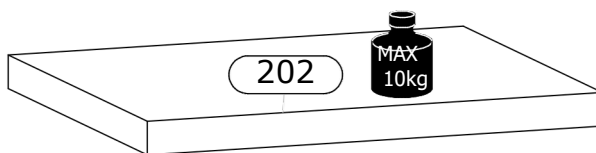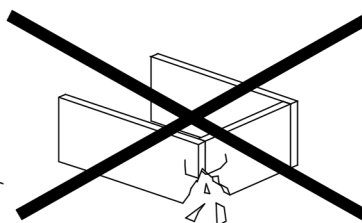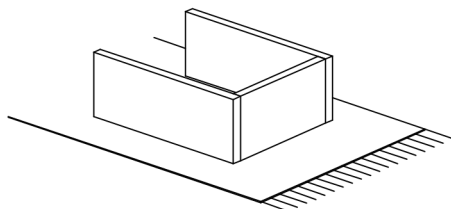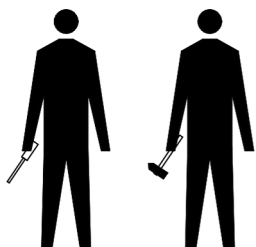






No	L[mm]	W[mm]	H[mm]	PCS	BOX
003	384	189	18	1	1/2
105	414	400	15	1	1/2
106	414	400	15	1	1/2
202	512	430	36	1	1/2
304	460	400	15	1	1/2
305	460	400	15	1	1/2
402	459	60	15	1	1/2
503	486	390	2,5	1	1/2
504	351	341	2,5	1	1/2
609	414	50	22	2	1/2
W001	1057	100	12	1	1/2

Diagram 2 illustrates the step of attaching the front panel (504) to the cabinet frame. The front panel is shown being moved into position, guided by a large black arrow. The panel is secured to the frame using screws (W001) and a cam lock mechanism. A curved arrow indicates the panel is rotated into its final position.




3

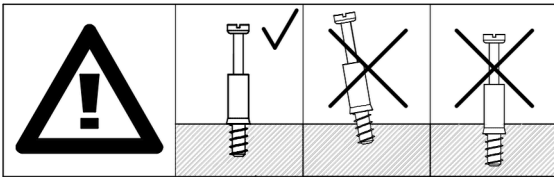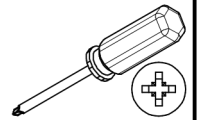
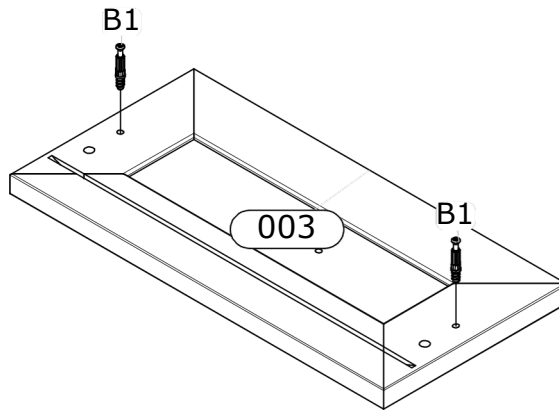
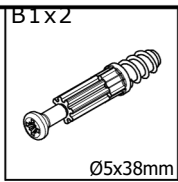


4

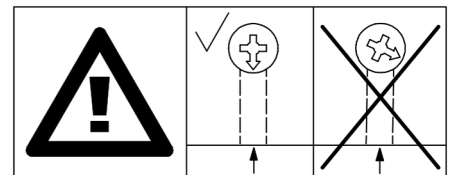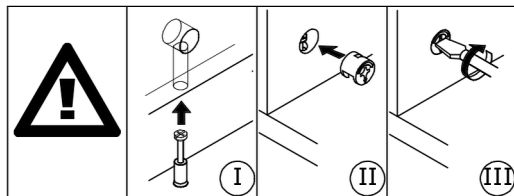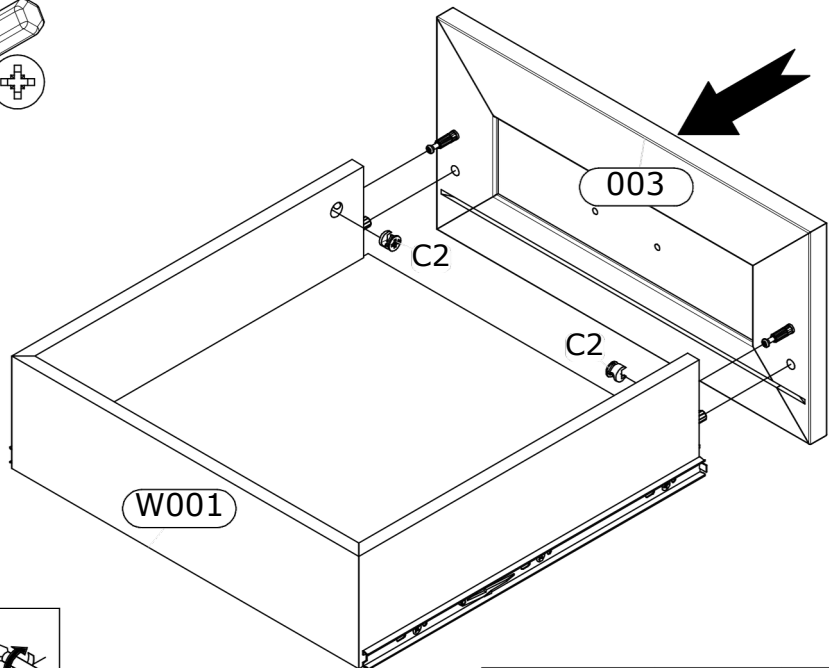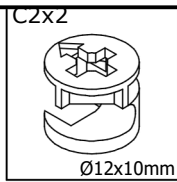


5

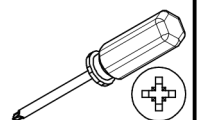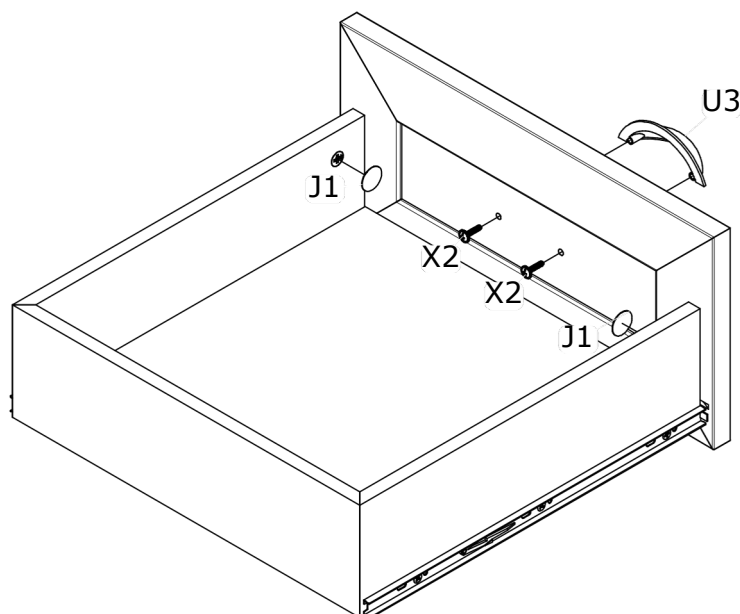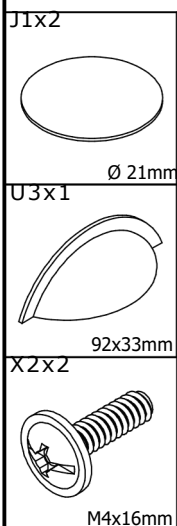

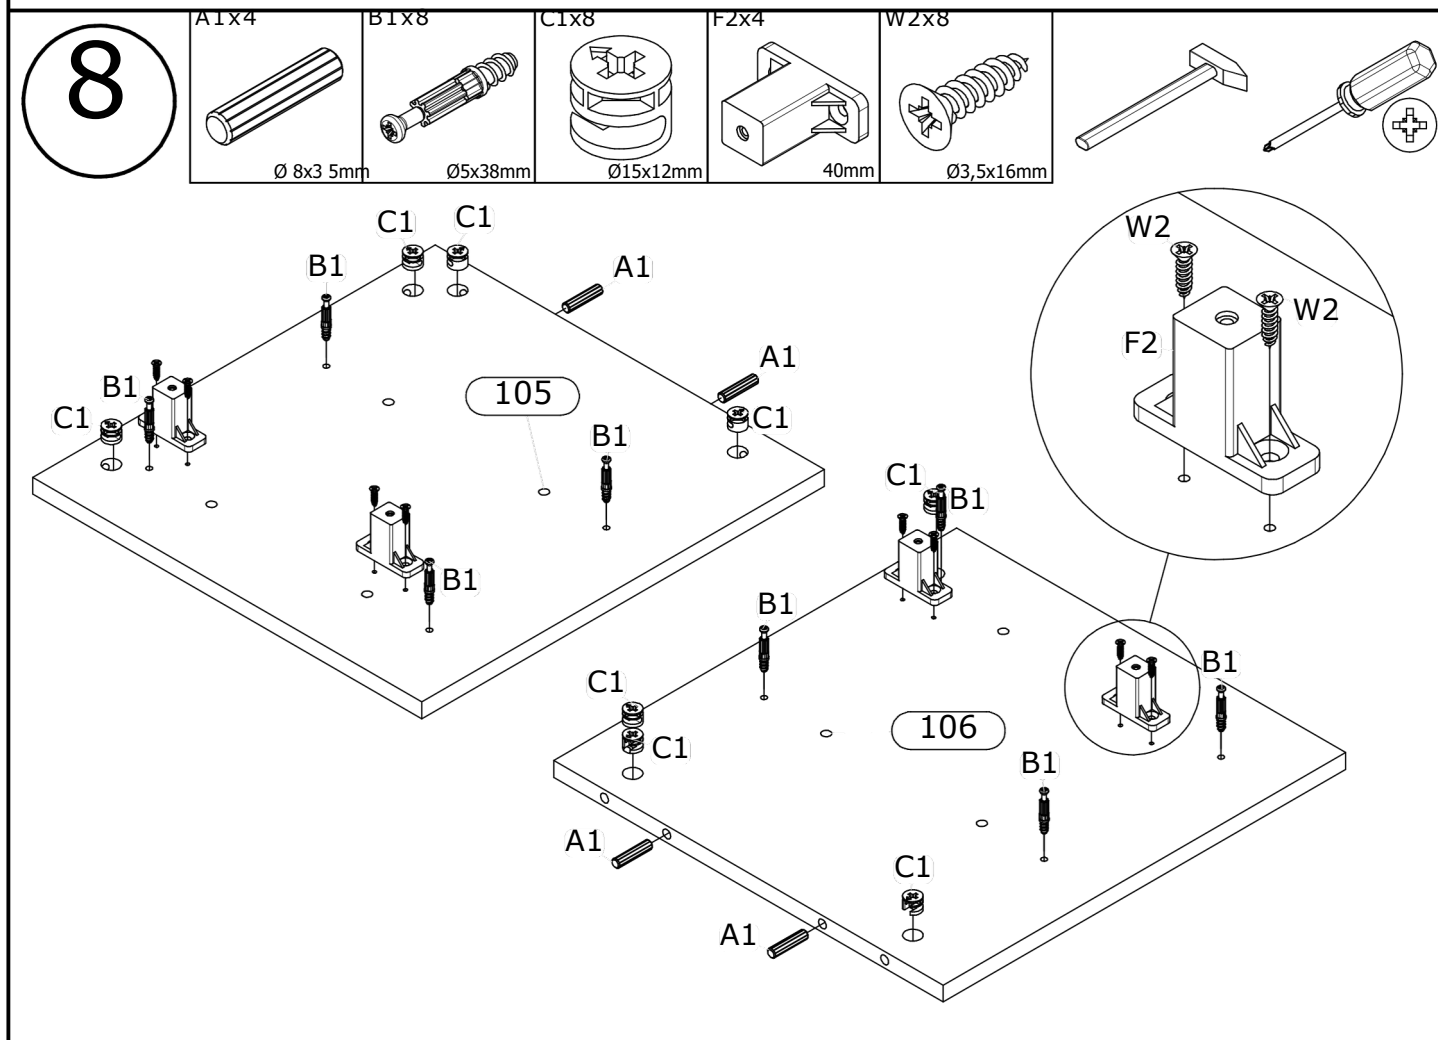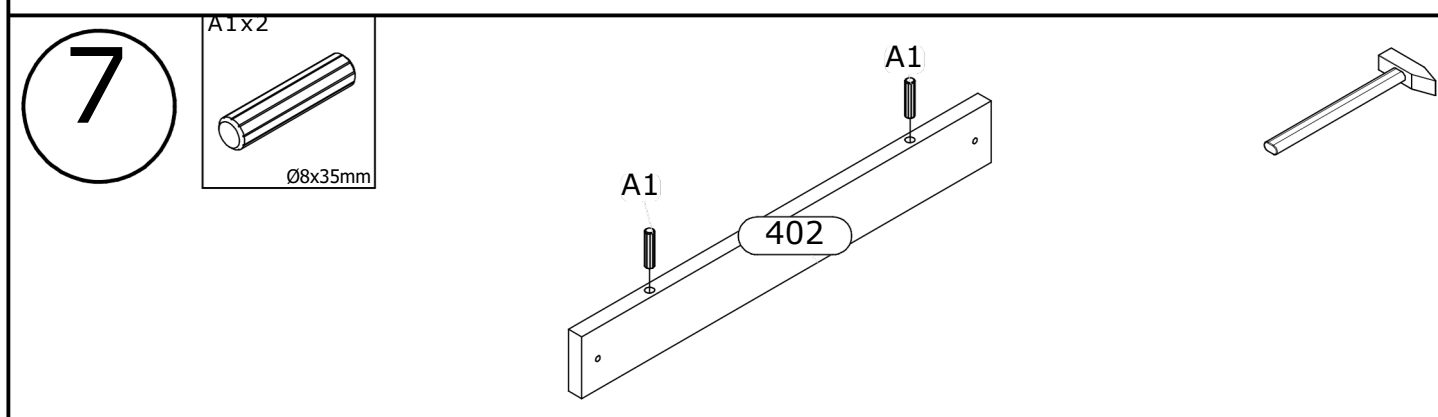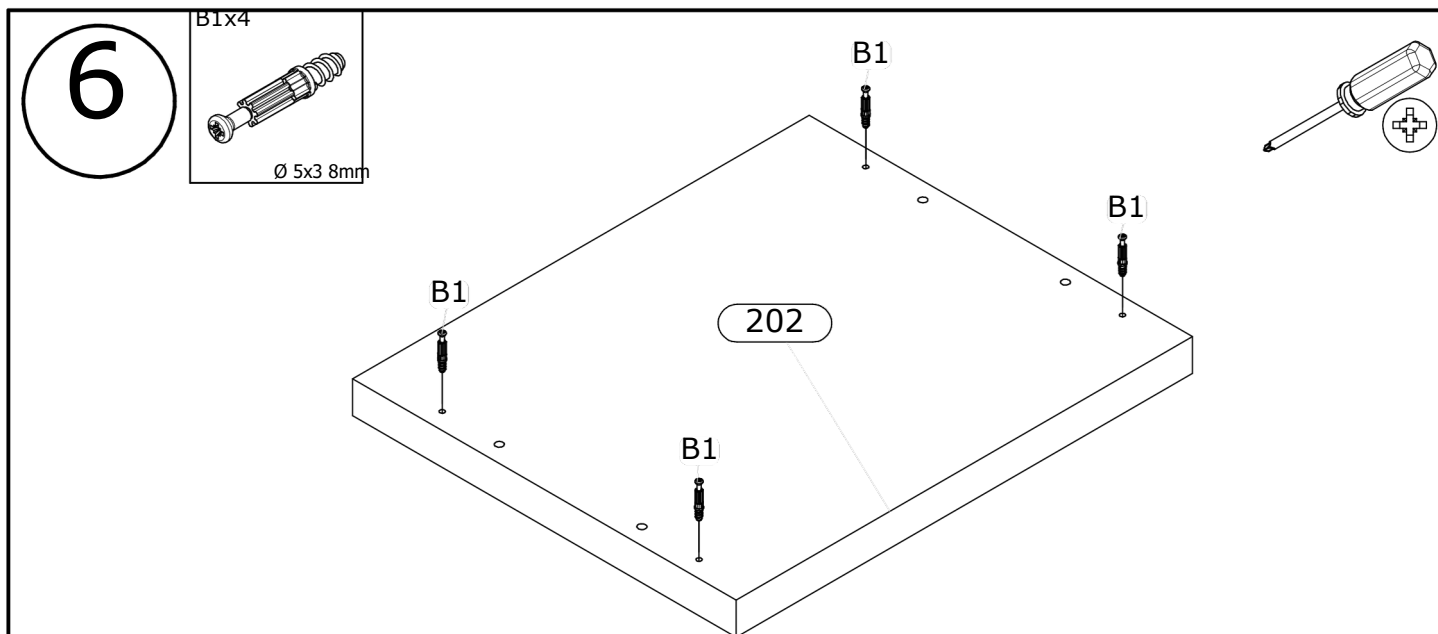


9

P2-a x 2




350mm

W5x4






Ø 4x30mm

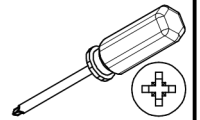




W5

P2-a






W5

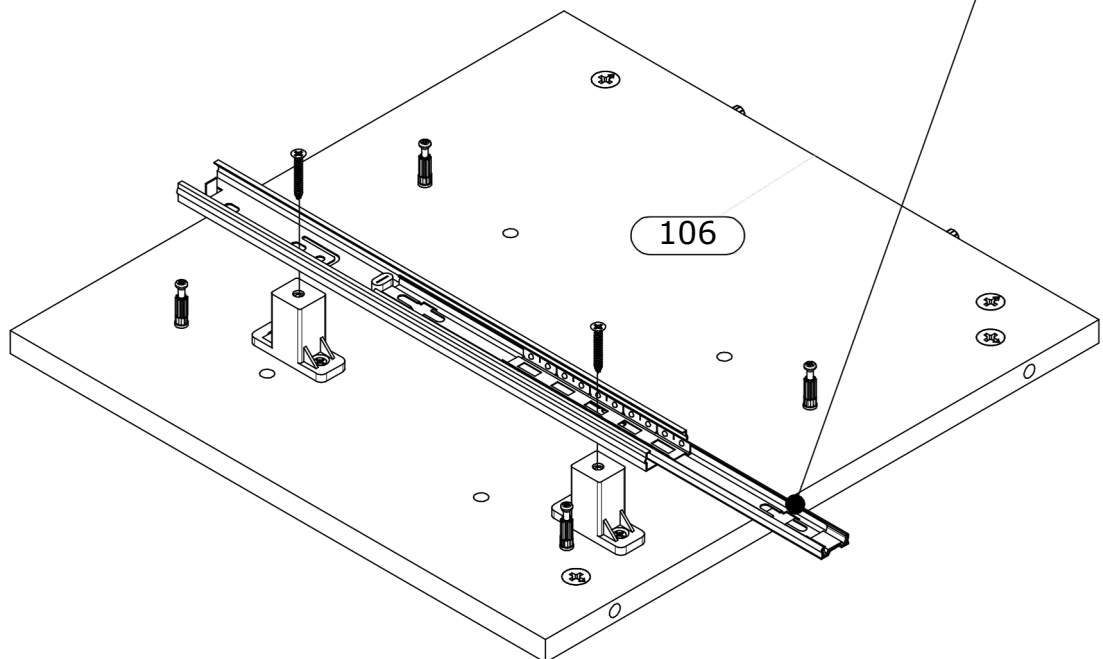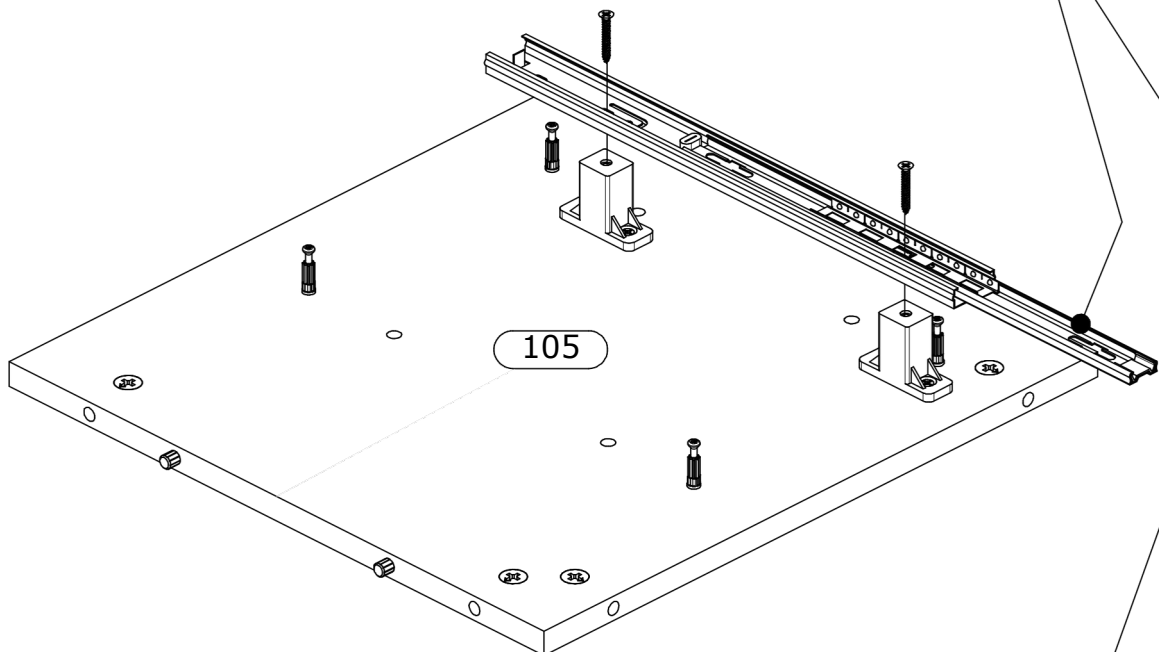



10

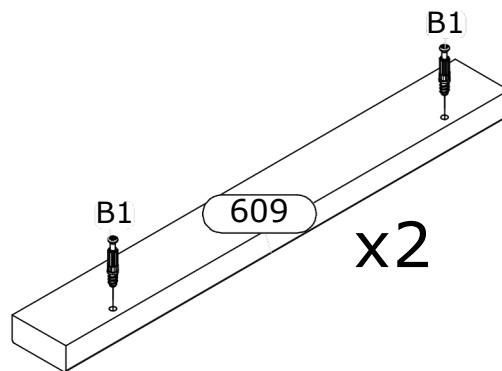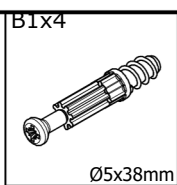



11

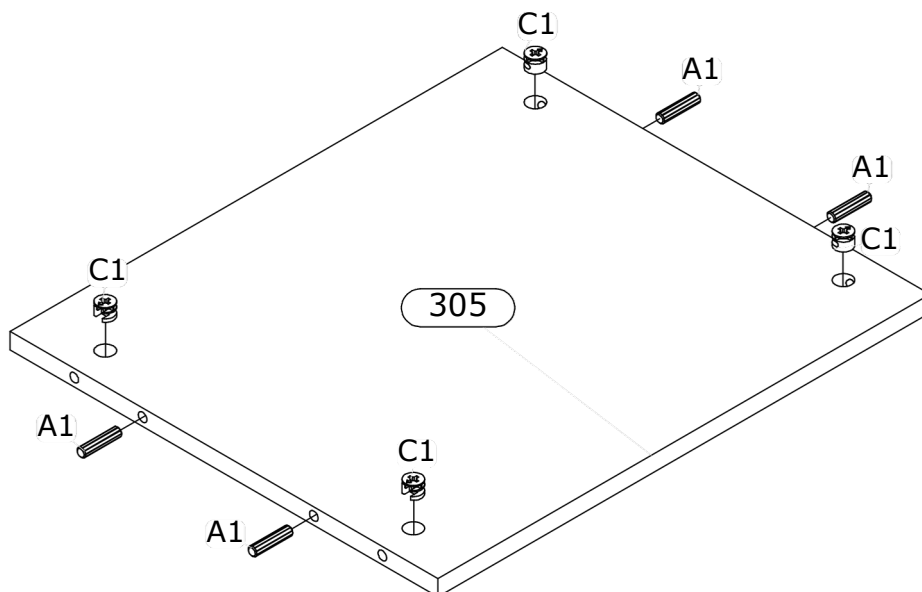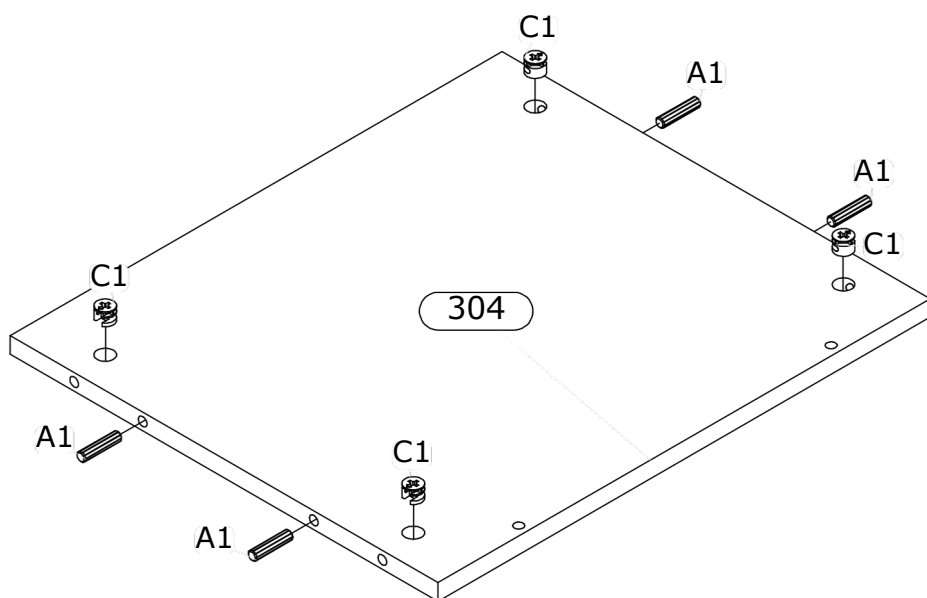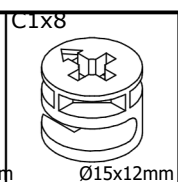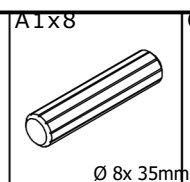


12

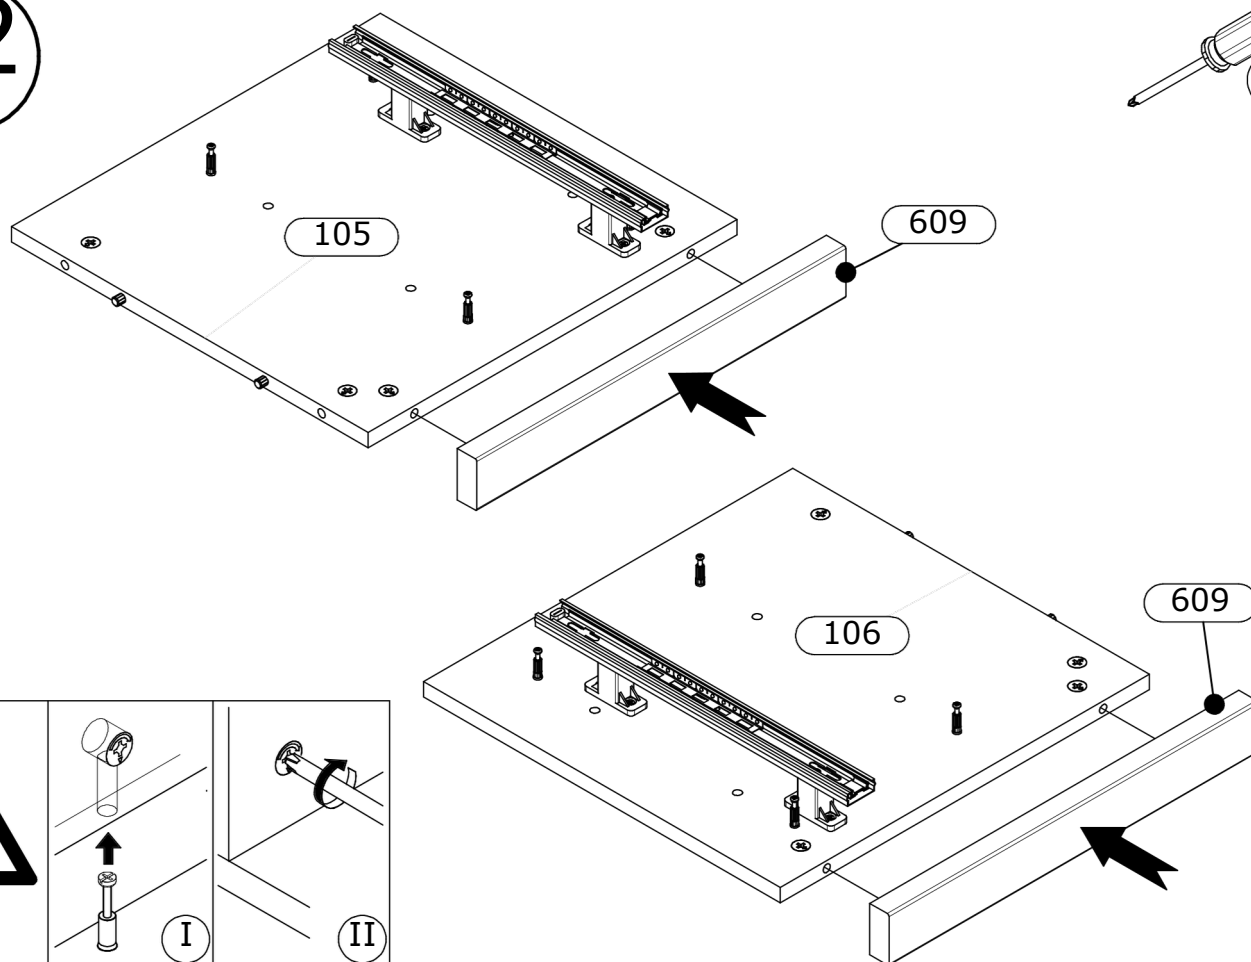






13

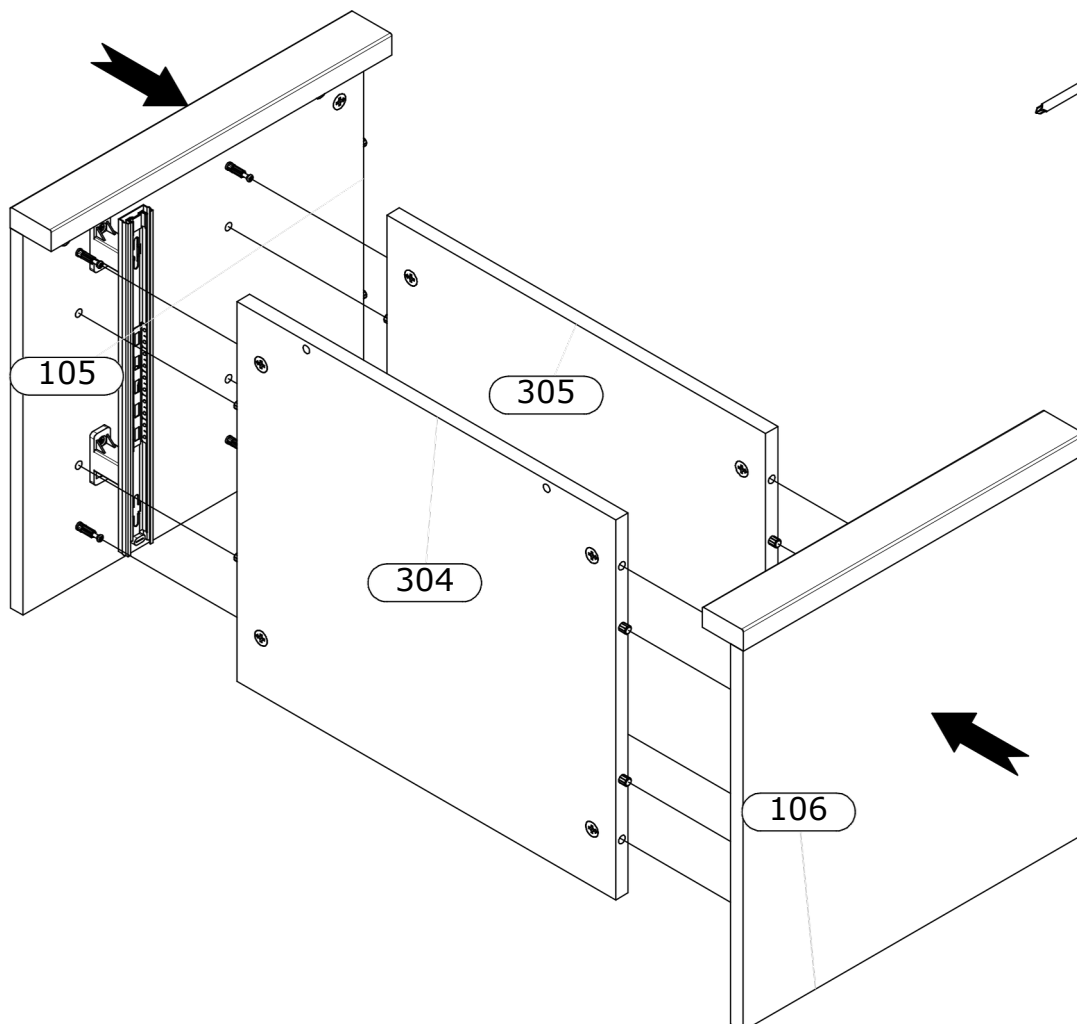


14

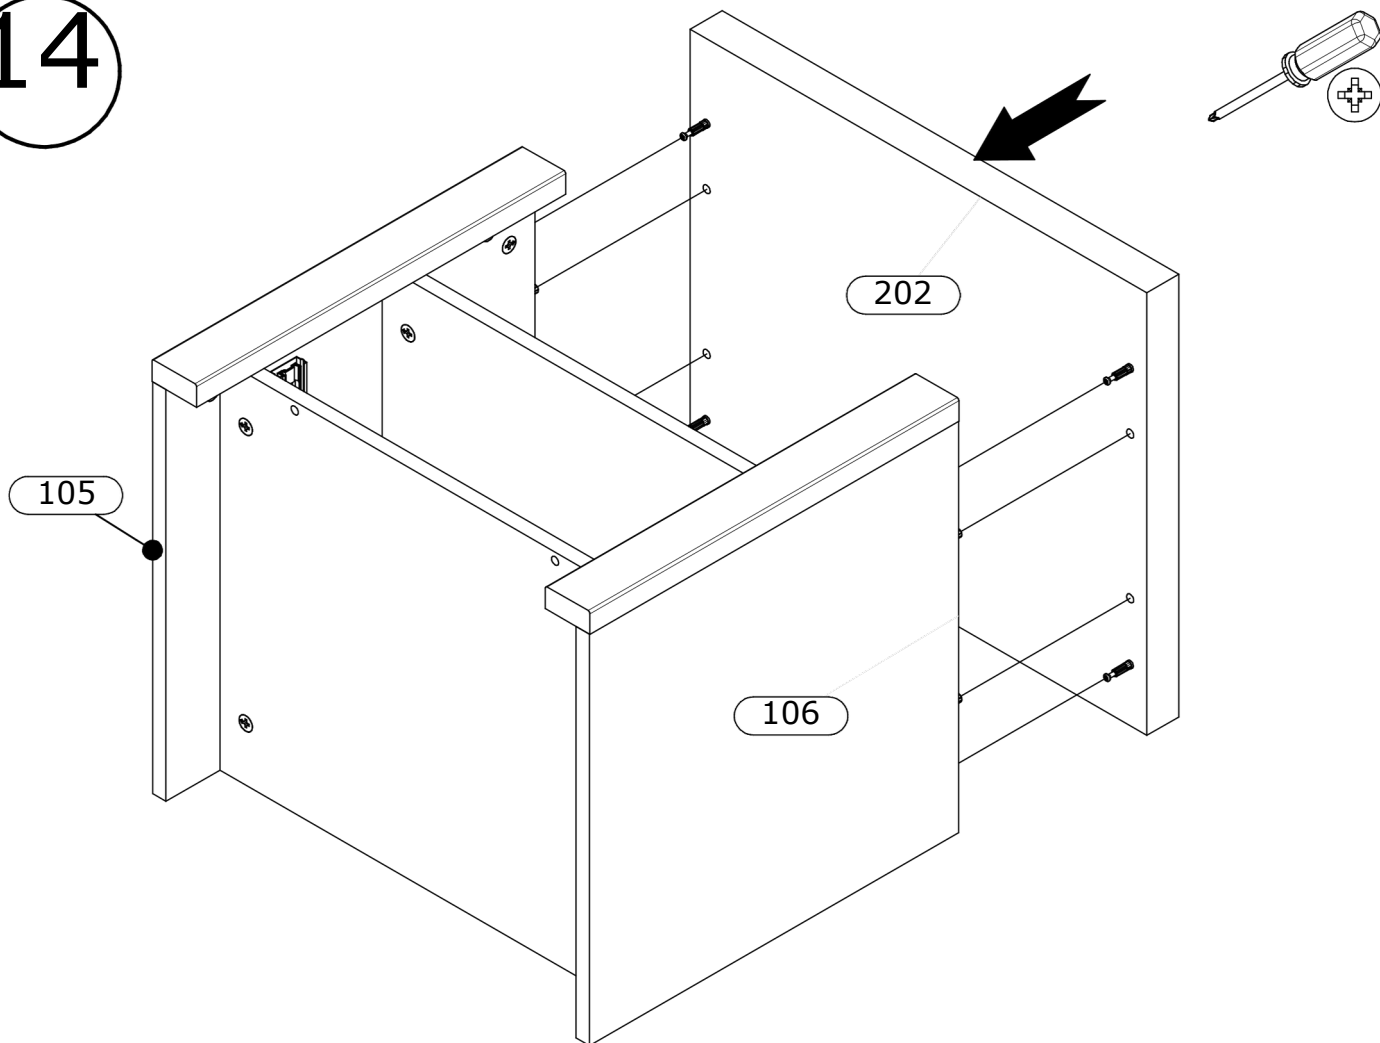





15

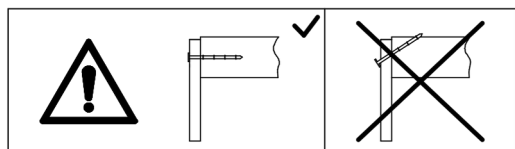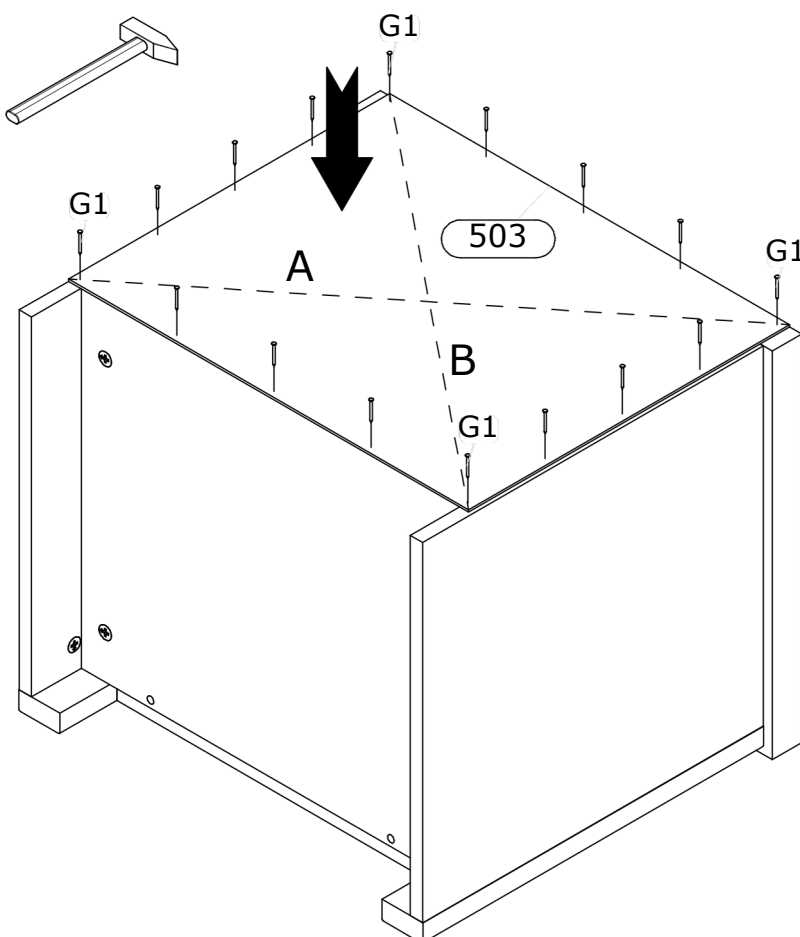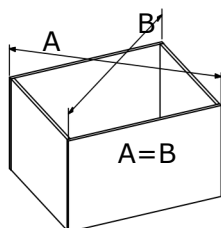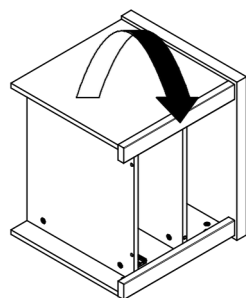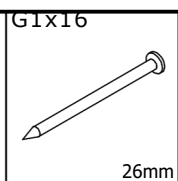




16

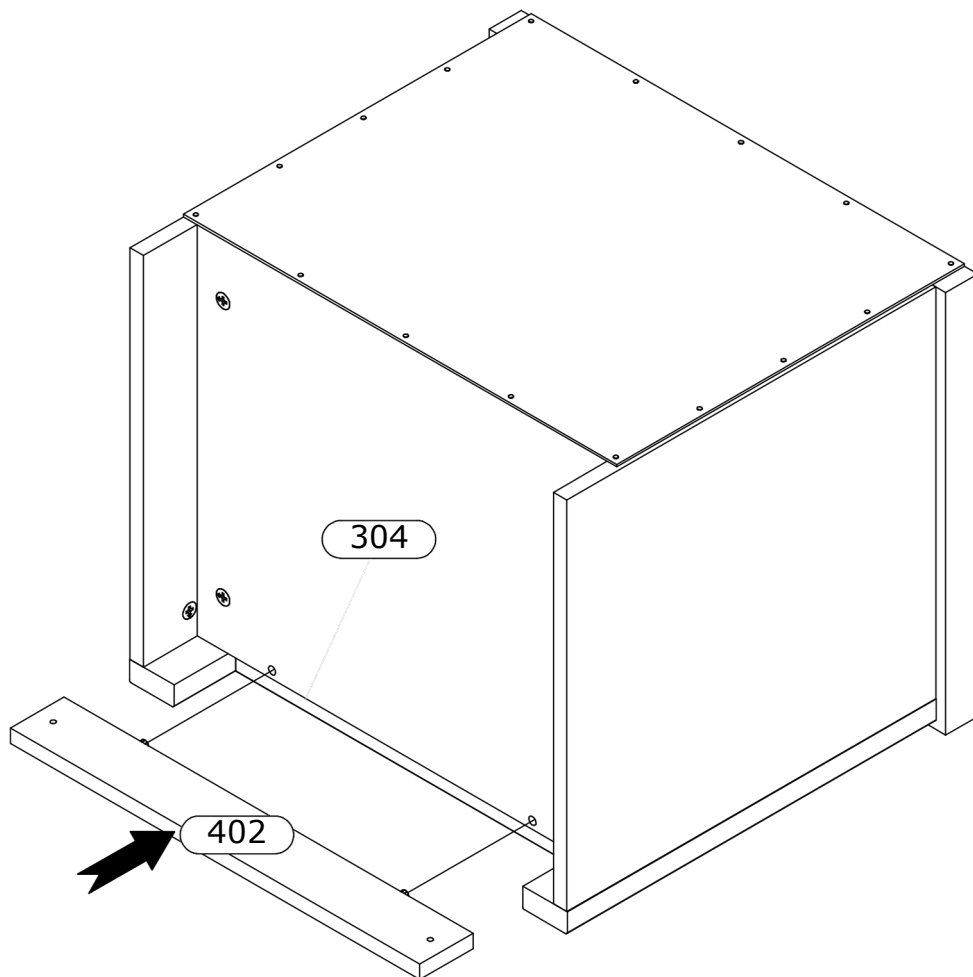




17

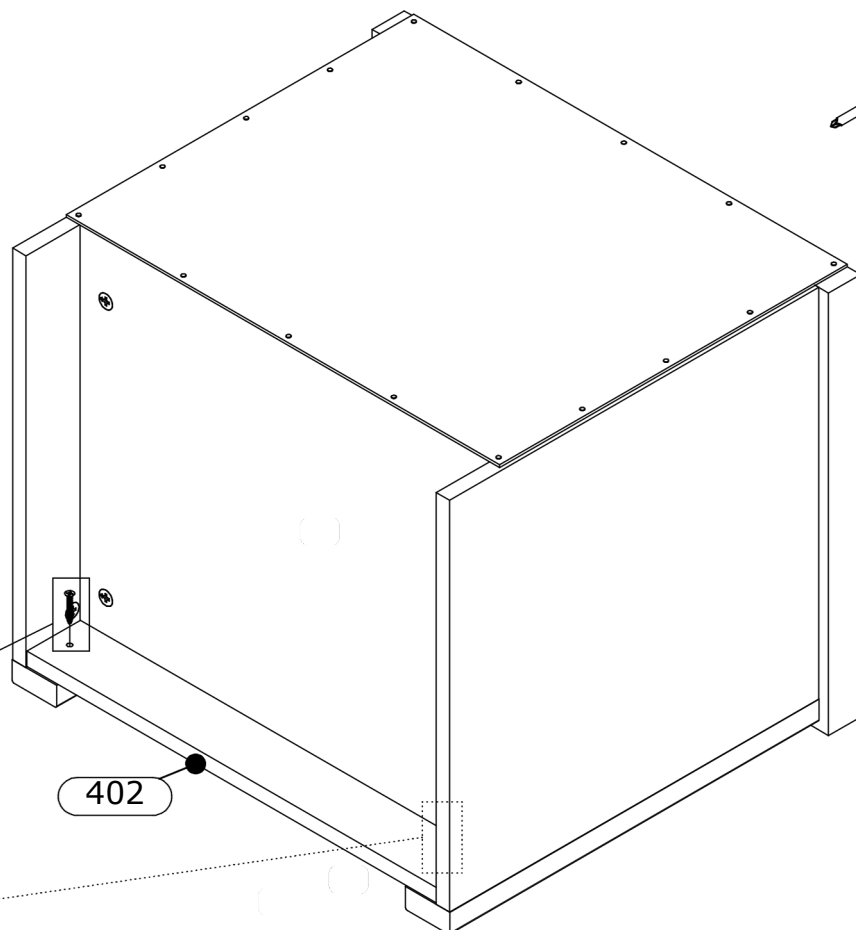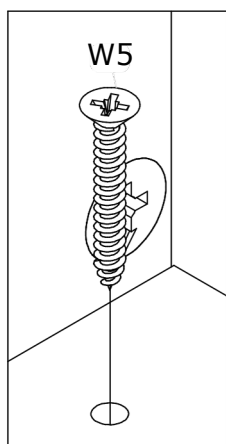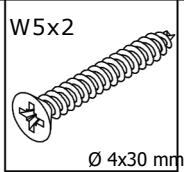


18

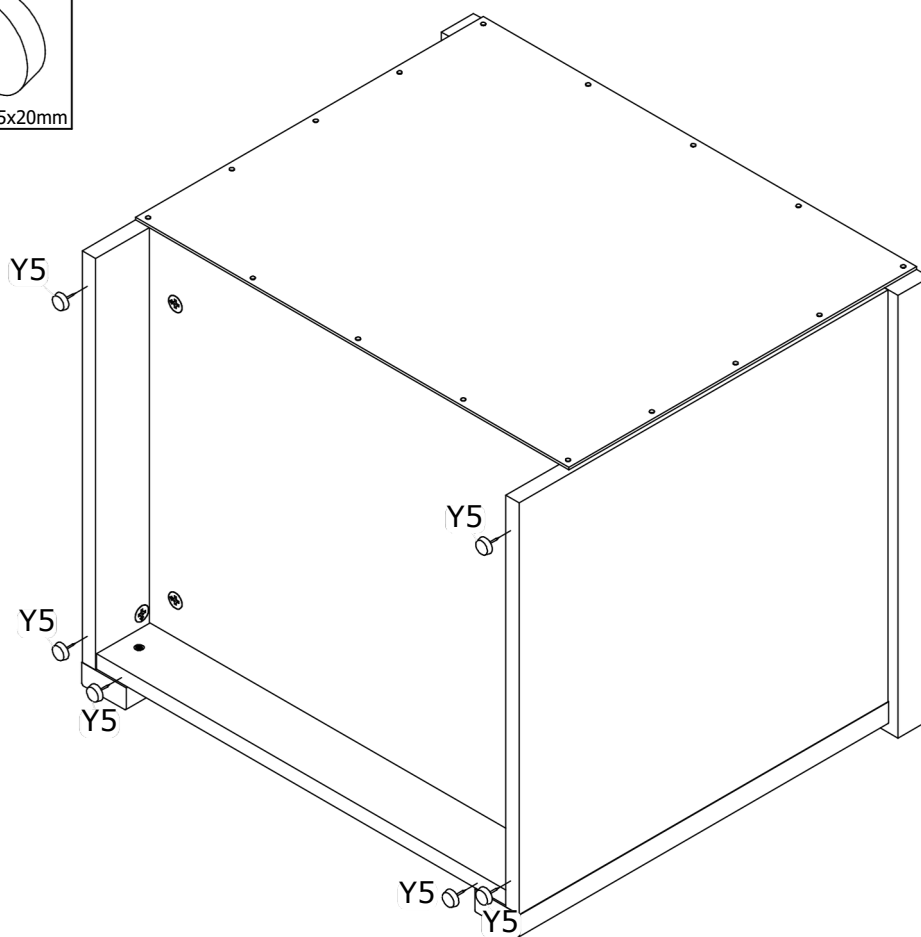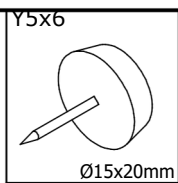


19

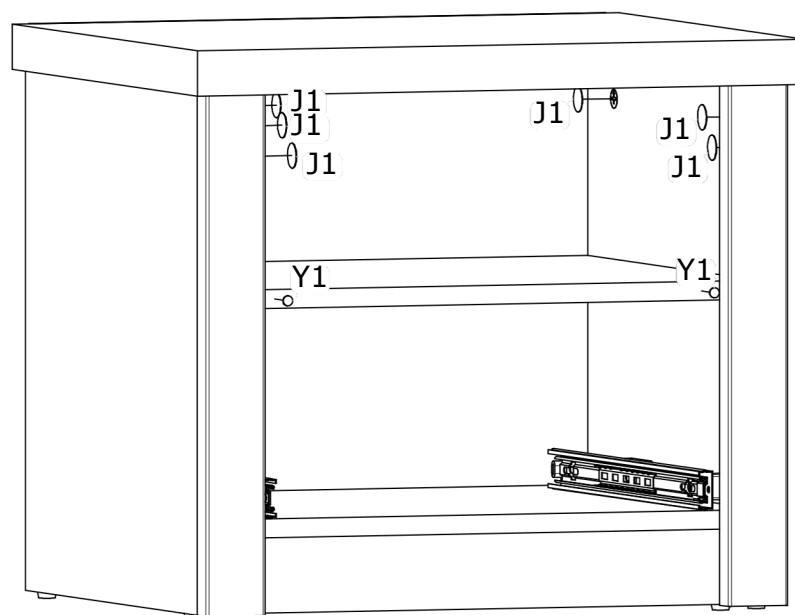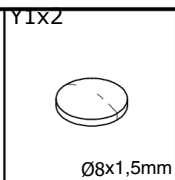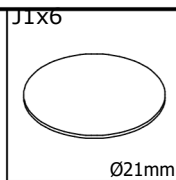



20

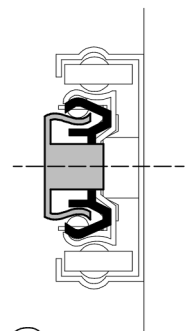

I



II

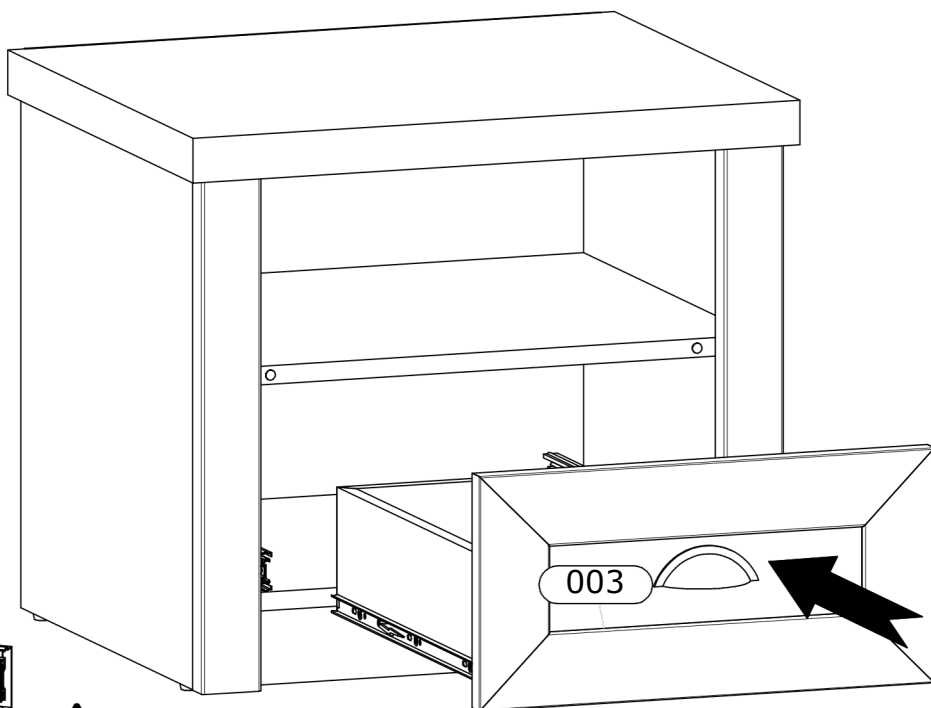



21

W1x2



Ø3,5x13mm

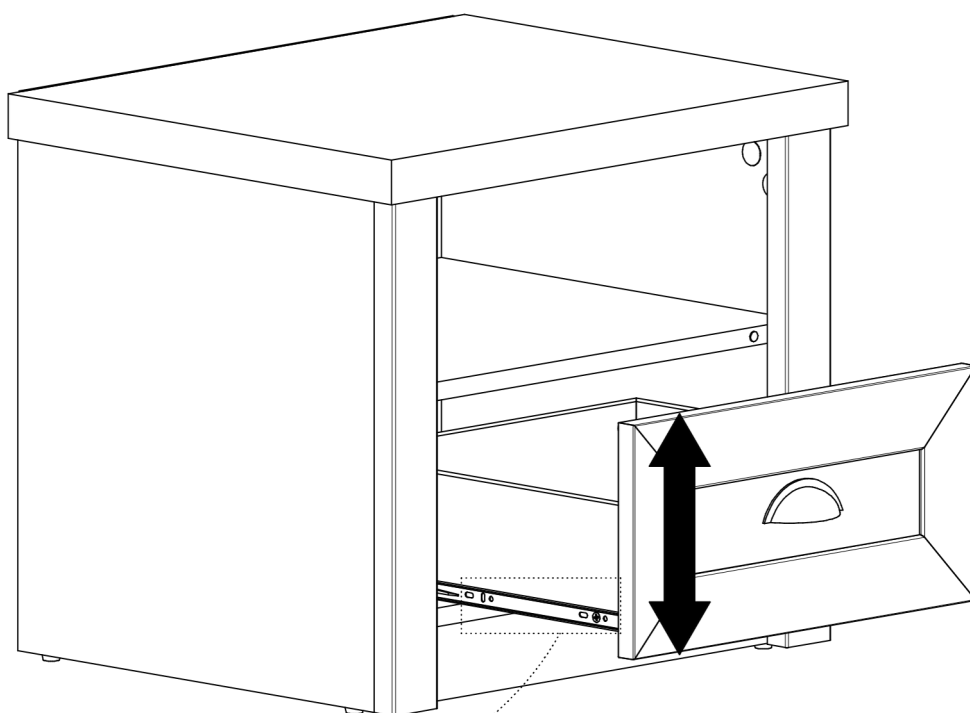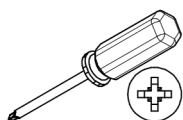

I



II

