
NOVA LUCE


9701623

1

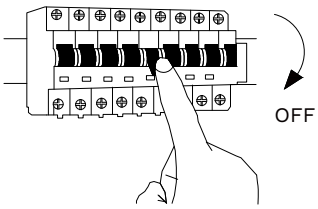


Turn off the general switch

2

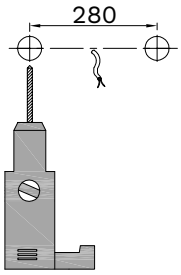


Drill holes

3

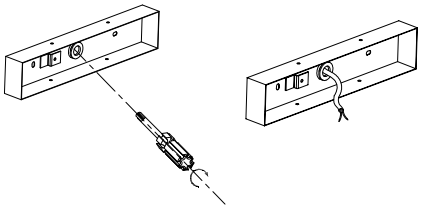


Get the wire through the hole

4

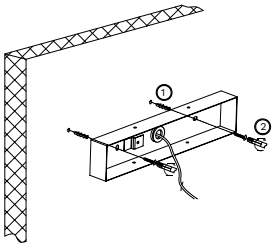


Apply plastic anchors with screws

5

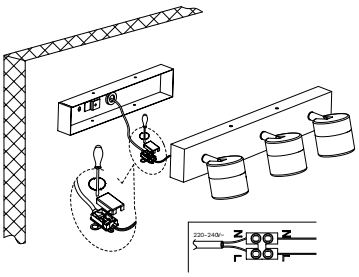


Connect the wires

6

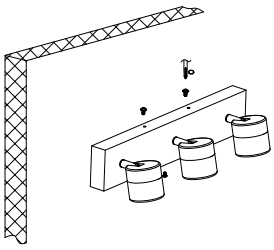


Apply all the nuts

7

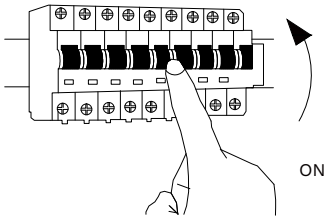

Turn on the general switch

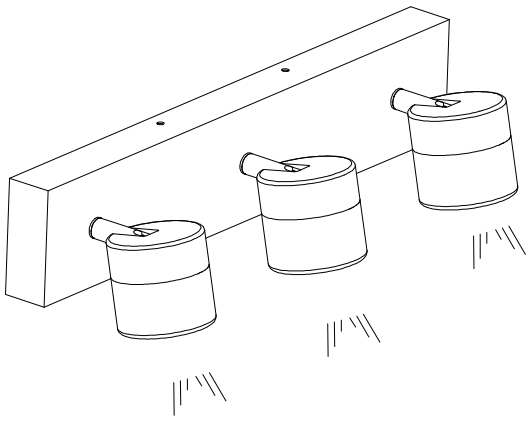

www.novaluce.com