
NOVA LUCE


9083011

1

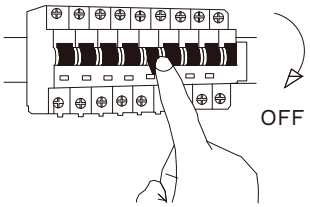


Turn off the general switch

2

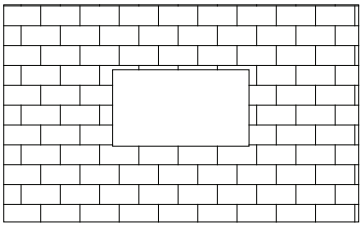


Cut hole in the wall(BOX504)

3

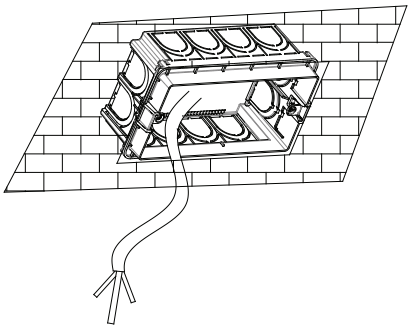


Embed the embedded box(504)

4

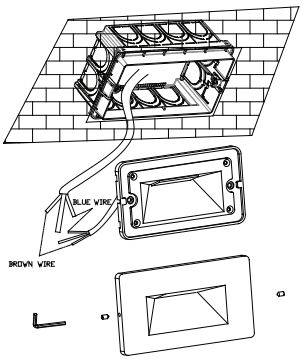


Untight the side screws
Connect the wires

5

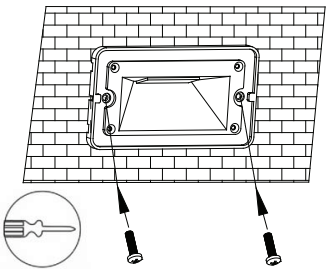


Apply the screws

6

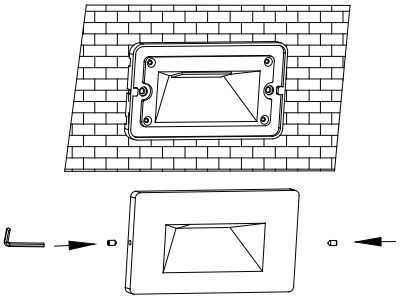


Tight the side screws

7

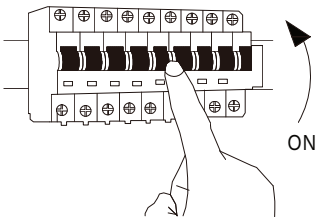

Turn on the general switch

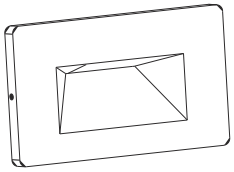

www.novaluce.com